 


Your camera must be updated before you can use it.

See instructions inside. Requires internet access.

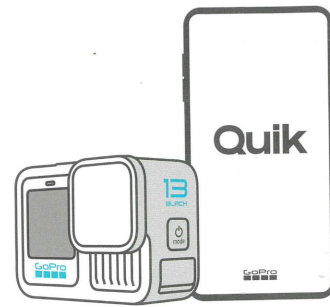

Mise à jour requise.
Doit disposer d'un accès
à Internet.

Update erforderlich.
Internetzugang
erforderlich.

Aggiornamento richiesto.
È necessario l'accesso
a Internet.

Actualización necesaria.
Debes tener acceso
a Internet.

Atualização necessária.
É necessário ter acesso
à internet.

Update vereist.
Internetverbinding vereist.

Vaatii päivityksen. Vaatii
internetyhteyden.

Wymagana aktualizacja.
Wymagany dostęp do
Internetu.

Требуется обновление.
Необходим доступ к
Интернету.

Obligatorisk
uppdatering. Kräver
internetåtkomst.

需要更新。須连接互
联网。

需要更新。必須連線至網
際網路。

更新が必要です。インタ
ーネット接続が必要にな
ります。

업데이트 필요. 인터넷에
접속할 수 있어야 합니다.

يجب التحديث. يجب توفر
اتصال بالإنترنت.

1. Install the GoPro Quik app on your phone.

 
Installez l'application GoPro Quik sur votre téléphone. • Installiere die GoPro Quik App auf deinem Smartphone. • Instala l'app Quik GoPro sul telefono. • Instala la aplicación GoPro Quik en tu teléfono. • Instale o aplicativo GoPro Quik no celular. • Installeer de GoPro Quik-app op je telefoon. • Lataa GoPro Quik -sovellus puhelimeesi. • Zainstaluj aplikację GoPro Quik w swoim telefonie. • Установите приложение GoPro Quik на телефон. • Installera GoPro Quik-appen på telefonen. • 在手机上安装 GoPro Quik 应用. • 在手机上安装 GoPro Quik 應用程式. • スマートフォンにGoProのQuikアプリをインストールします. • 휴대폰에 GoPro Quik 앱을 설치합니다. • قىيىططت تىيىتت ب قى. • لىغىتاه ىلغ GoPro Quik.

To update without the app, visit • Pour effectuer une mise à jour sans l'application, rendez-vous sur • Besuche zum Aktualisieren ohne die App die Website • Per eseguire l'aggiornamento senza l'app, visita • Para actualizar sin la aplicación, visita • Para atualizar sem o aplicativo, acesse • Als je wilt bijwerken zonder de app, ga je naar • Jos haluat päivittää kameran ilman sovellusta, mene osoitteeseen • Aby zaktualizować oprogramowanie bez aplikacji, odwiedź • Для обновления без приложения перейдите на страницу • Om du vill uppdatera utan appen besöker du • 如要不通过应用完成更新, 请访问 • 若不使用應用程式更新, 請造訪 • アプリを使用せずに更新する場合はへアクセスしてください. • 앱 없이 업데이트할 경우 참조 사이트: • قىيىططت لى ملىجىتسىا نود نىم تىيىتت لىل. • لىغىتاه ىلغ GoPro Quik


gopro.com/update/hero13-black




2.

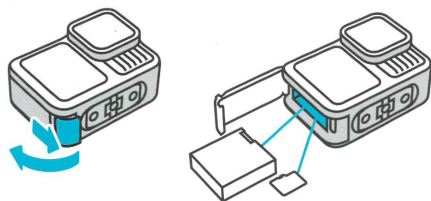

 4.


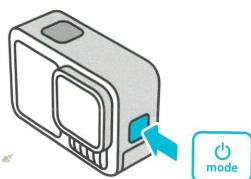


 3.

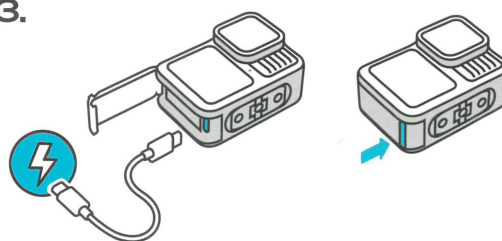

5. Follow the instructions on your camera's screen.

  
Suivez les instructions qui s'affichent à l'écran de votre caméra. • Befolge die Anweisungen auf dem Bildschirm deiner Kamera. • Segui le istruzioni visualizzate sullo schermo della fotocamera. • Sigue las instrucciones que aparecen en la pantalla de la cámara. • Siga as instruções da tela da sua câmera. • Volg de instructies op het scherm van je camera. • Seuraa kameran näytöllä näkyviä ohjeita. • Postępuj zgodnie z instrukcjami wyświetlanymi na ekranie kamery. • Следуйте инструкциям на экране камеры. • Följ instruktionerna på kameraskärmen. • 請按照攝像機屏幕上的說明進行操作。 • 請按照相機畫面的指示操作。 • カメラ画面の手順に従って操作します。 • 카메라 화면의 지시를 따르세요. • اتبع التعليمات التي تظهر على شاشة الكاميرا.

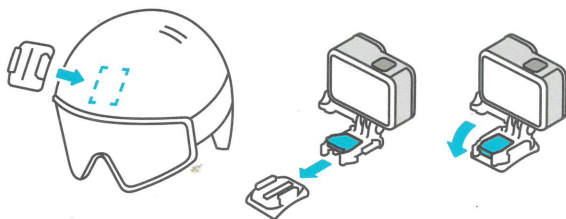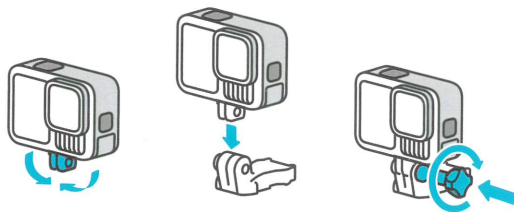

Scan to learn more about HERO13 Black

Scannez pour en savoir plus • Scannen, um mehr zu erfahren • Esegui la scansione per ulteriori informazioni • Escanea para obtener más información • Leia para saber mais • Scan voor meer informatie • Skannaaj lue lisää • Zeskanuj, aby dowiedzieć się więcej • Отсканируйте, чтобы узнать больше • Skanna för att läsa mer • 扫描了解更多 • 掃描以深入瞭解 • 스캔하여 자세히 알아보려면 스캔하세요 • امسح ضوئياً لمعرفة المزيد

 gopro.com/OOBE

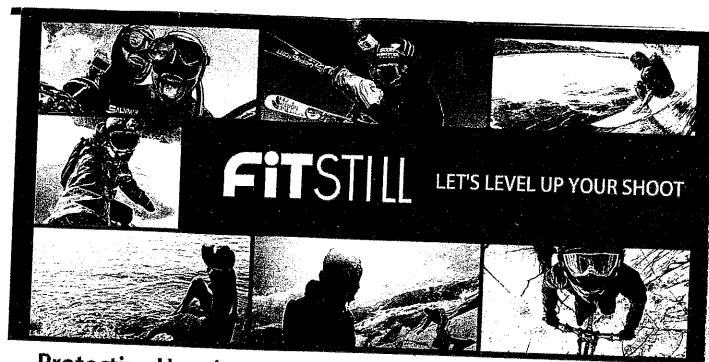

Protective Housing

➤ **USER GUIDE**

Additional Instructions for The Use of Housings

Warm advice:

Since the camera will heat up when you use it, we recommend that you use this product after tearing off the protective film of the camera body (not the lens and screen protective film). Avoid heat conduction of the protective film from damaging the sponge strips in the waterproof case.

Thank you for your purchase of FitStill products!

 
FitStill is **LIFE-TIME WARRANTY**, we will ship you a new one if any problems. We are always trying our best to make you satisfied.

Please feel free to email us.

Best Regards,
FitStill
Stephanie

FITSTILL

Inserting the Camera

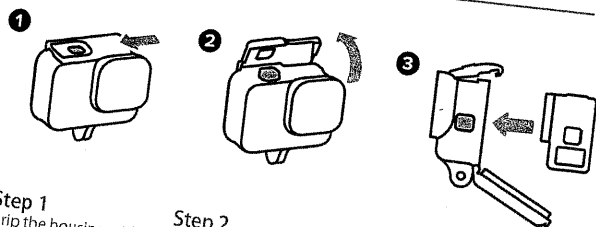


Step 1
Grip the housing with your hand.

Step 2
With your other hand, open the lock with upward force.

Step 3
Place your GoPro inside the housing.

01

 Inserting the Camera

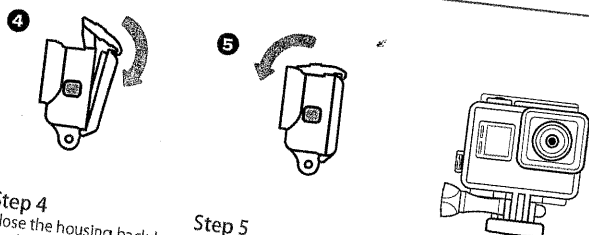


Step 4
Close the housing backdoor. Hook the latch into the groove on the backdoor.

Step 5
Press down in the direction of the picture arrow.


Successful installation!

02

 What's Included

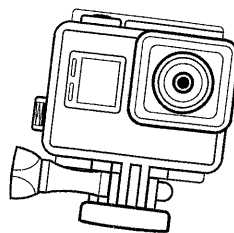

 DIVE HOUSING
Designed for deep sea diving and extreme activities.
★ Please remove the protective film from the waterproof case before use.

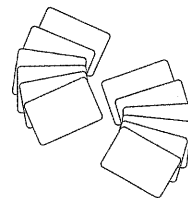

GIFT FOR YOU
ANTI FOG INSERTS
Protecting your photography from fog.

03

 
The Use of Anti-fog Inserts

Anti Fog Inserts

1. Store in an airtight bag
2. Place into Side and Bottom

Reusable

To dry out and reuse.
Heat inserts on a pan oven at 300°F for 5 min.

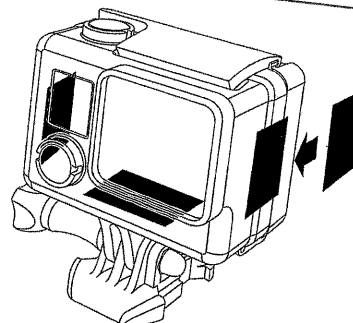

04

Navigating with the Buttons

1. With the camera powered on, hold down the Mode button  and press the Shutter button .
2. Use the Mode button to cycle through the presets.
3. Press the Shutter button to select a preset.
4. To exit, press and hold the Shutter button, or cycle to Done in the menu.

05

Pre-use Precautions

PRE-USE PRECAUTIONS

Before using the waterproof case, please pay attention to remove the debris in the waterproof case and the rubber seal ring, and check whether the waterproof case has cracks and rust.

A single hair or grain of sand on the housing and rubber seals can cause leaks or affect image and sound quality. Please pay special attention to your use and maintenance! If you encounter the above problems, please do not use the waterproof shell for diving and other sports.

06

The Housing Daily Maintenance

CLEANING THE LENS

Keep the lens clean by wiping it with a soft, damp cloth if it comes in contact with food, lotion, ink, or anything that could cause a stain. Do not use window cleaners, household cleaners, solvents, alcohol, or anything abrasive. (Please only clean the surface of the lens housing, not the inside.)

CLEANING THE HOUSING

When cleaning, it is recommended that you wash the case surface with fresh water, especially after use in the sea. If there is any foreign matter inside the waterproof case, please wipe it with a clean damp cloth. After cleaning, it is recommended that you wipe dry with a lint-free cloth, shake dry or air dry naturally.

07

The Housing Daily Maintenance

How often is it cleaned?

If you're snorkeling or using it on sand. It is recommended that you clean the case after each use. If you shoot daily on land, it is recommended that you clean once a day.

How to maintain the waterproof case when it is not in use?

When you do not use the housing, please use fresh water to clean the waterproof shell. The housing is placed in a dry, dust-free environment to avoid direct sunlight and reduce contact with water and dust. This will make your camera waterproof case is longer life!

08

Additional Instructions for The Use of Housings

The waterproof housing won't open in cold environment?

► If you use a housing in cold air, you may not be able to open the housing.

Therefore, it is recommended that you install the housing case for the camera outdoors, not indoors.

(This is because the indoor and outdoor temperatures are not the same. Maybe after installation, the pressure inside and outside the waterproof housing is inconsistent, resulting in the failure to open the waterproof housing.)

► If you've already installed a waterproof case but can't open it to take out the camera inside, it's recommended that you choose one or two of the following methods:

- Soak in warm water for about 7 min
- Cover with a hot towel for 5 min
- Use your body heat and place it between your clothes and your body for about 10 min