


Mounting Strap Installation


Dual Screen Portable DVD Player-SDVD1037

Step1

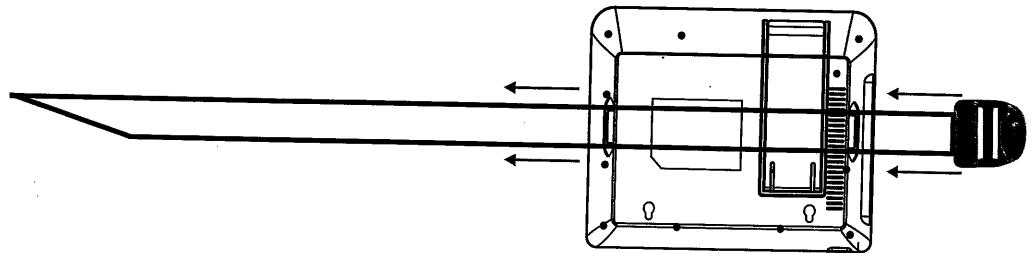

Go the strap through the two holes on both sides of the rear side of the player as shown on the above figure.

Step2

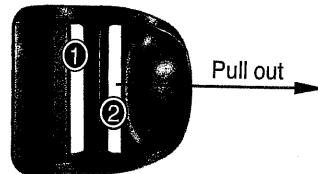


Go the strap from gap ① and go out from the rear side of the gap ② as shown on the above figure.

Step3

Fasten the player to the headrest of the seat in the car.


Correct

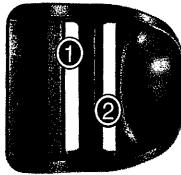

NOTE: This side must face toward you.
The strap must be inserted into the front side of the gap ① and inserted from the rear side of the gap ② as shown on the figure above.

The straps will be fastened securely and cannot be pulled out horizontally.

Wrong

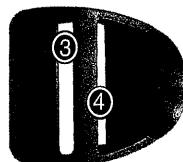


If the strap goes from the front side of the gap ③ and goes out from the rear side of the gap ④ as shown on above figure.

The straps will not be fastened securely and can be pulled out horizontally, causing the DVD player to drop dangerously.

SYLVANIA

**10" DUAL SCREEN PORTABLE DVD PLAYER
MODEL:SDVD1037**

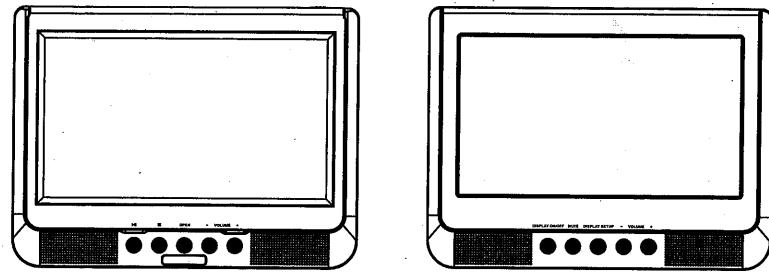

INSTRUCTION MANUAL

Please read this User Manual carefully to ensure proper use of this product and keep this manual for future reference.


Important Safety Instructions

17) Overloading
Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

18) Object and liquid entry
Never push objects of any kind into the product through openings as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.

19) Outdoor antenna grounding

If an outside antenna is connected to the product, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 80 of the National Electric Code ANSI/NFPA 70 provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge product, size of grounding conductors, location of antenna-discharge product, connection to grounding electrodes, and requirements for the grounding electrode.

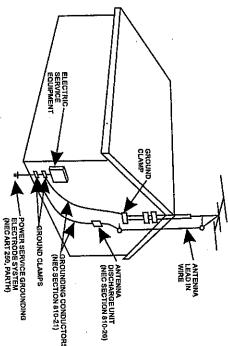

20) Service

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

21) Replacement parts

When replacement parts are required, be sure the service technician uses replacement parts specified by the manufacturer or those that have the same characteristics as the original parts. Unauthorized substitutions may result in fire or electric shock or other hazards.

22) Safety check

Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

23) Wall or ceiling mounting

The product should be mounted to a wall or ceiling only as recommended by the manufacturer.

24) Damage requiring service

Unplug this product from the wall outlet and refer service to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or the cabinet has been damaged.
- When the product exhibits a distinct change in performance - this indicates a need for service.

NOTES ON CLEANING:

- Use a soft, dry cloth for cleaning.
- For stubborn dirt, soak a cloth in a weak detergent solution, wring well and wipe. Use a dry cloth to wipe it dry. Do not use any type of solvent, such as thinner and benzene, as they may damage the surface of the DVD player.
- If you use a chemical-saturated cloth to clean the unit, follow that product's instructions.

Warning:

- Cleaning and adjustment of lenses and/or other components of playback mechanism should be performed by a qualified service technician.

NOTE:
Refer all servicing to qualified service personnel. Servicing is required when the unit has been damaged in any way such as the following: the power-supply cord or plug has been damaged, liquid has been spilled into unit, the unit has been exposed to rain or moisture, the unit has been dropped or the unit does not operate normally.

Note to CATV system installer
This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

Important Safety Instructions

NOTES ON HANDLING:

- When shipping the DVD player, always use the original shipping carton and packing materials. For maximum protection, repack the unit as it was originally packed at the factory.

- Do not use volatile liquids, such as insect spray, near the DVD player. Do not leave rubber or plastic products in contact with the DVD player for a long time. They will leave marks on the finish.

- When you place this DVD player near a TV, radio or VCR, the playback picture may become poor and the sound may be distorted. In this case, move the DVD player away from the TV, radio or VCR.

- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.

- When you bring the DVD player directly from a cold place to a warm place.

- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.

- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioned room.

- When you use the DVD player in a humid place.

NOTES ON MOISTURE CONDENSATION:

- Moisture condensation damages the DVD player. Please read the following carefully.**
- Moisture condensation occurs, for example, when you pour a cold drink into a glass on a warm day. Drops of water form on the outside of the glass. In the same way, moisture may condense on the optical pick-up lens inside this unit, one of the most crucial internal parts of the DVD player.
- When you bring the DVD player directly from a cold place to a warm place.
- When you use the DVD player in a room where you just turned on the heater, or a place where the cold wind from the air conditioner directly hits the unit.
- In summer, when you use the DVD player in a hot and humid place just after you moved the unit from an air conditioned room.
- When you use the DVD player in a humid place.
- If you use the DVD player in such a situation, it may damage discs and internal parts. Remove the disc, connect the power cord of the DVD player to the wall outlet, turn on the DVD player and leave it ON for two or three hours. After two or three hours the DVD player will have warmed up and evaporated any moisture. Keep the DVD player connected to the wall outlet and moisture condensation will seldom occur.

About Discs

THE REGION NUMBER FOR THIS DVD PLAYER IS:
See the following page for information regarding region numbers.




PLAYABLE DISCS:

The following discs can be played back on this DVD player:

DISC TYPES:

Data on most DVDs is divided into sections called chapters, each of which is given a title or chapter number. Some features of this DVD player will not operate with some DVD discs as they are preset. If a function you selected does not run as desired, refer to the manual accompanying the DVD disc.

Compatible with DVD/DVD±R/DVD±RW/Kodak Picture JPEG/MP4

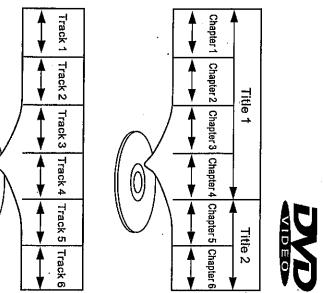

AUDIO CD:

Data on an audio CD is divided into sections called tracks, each of which is given a track number. Compatible with CD/CD-R/CD RW/MP3

IMPORTANT:

It is important that you read the manual that accompanies the DVD disc, as there are features that are on the DVD player that cannot be used with certain DVDs. There are also extra features on the DVD disc that are different to each DVD disc, so they are not explained in this owner's manual.

This player conforms to the NTSC and PAL color systems. However, if you are in the USA, Canada, or Mexico, leave this setting on NTSC. If incorrectly set to PAL, the TV picture may roll vertically. In this case, set the TV system to NTSC as specified.

Notes on Copyright:


It is forbidden by law to copy, broadcast, show, broadcast on cable, play in public and rent copyrighted material without permission. DVD video discs are copy protected, and any recordings made from these discs will be distorted. This product incorporates copyright protection technology that is protected by method claims of certain U.S. Patents and other intellectual property rights owned by Macrovision Corporation, and is intended for home and other limited viewing uses only, unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Region management information:

This DVD Player is designed and manufactured to respond to the Region Management information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play that disc. You may not be able to play back some DVD video discs on this player if they were purchased from outside your geographic area or made for business purposes. When you try to play back an unauthorized disc, Wrong region appears on the TV screen.


Product Overview

MAIN UNIT:

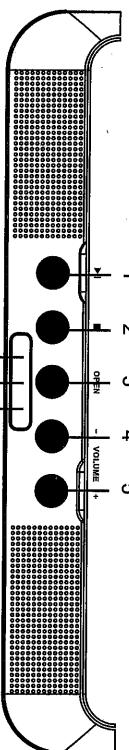

1. **PLAY/PAUSE (▶ II):** Press to switch between play and pause.
2. **STOP (■):** Press to stop playback.
3. **OPEN:** Press to open the CD door.
4. **VOL-:** Press to decrease the volume level.
5. **VOL+:** Press to increase the volume level.
6. **Charge Indicator:** Red Indicator will turn on when the unit is charging, and turn off when the unit is fully charged.
7. **Remote Control Sensor:**
8. **Power Indicator:** Green indicator will turn on when the unit is powered on, and turn off if the unit is powered off.


SECONDARY UNIT:

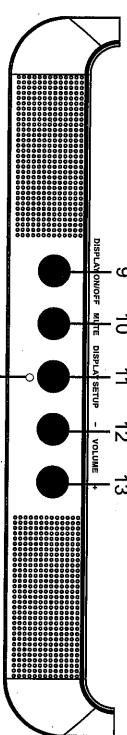

9. **DISPLAY ON/OFF:** Press to turn the display ON or OFF.
10. **MUTE:** Press to turn the sound OFF; Press again to resume.
11. **DISPLAY SETUP:** Press to enter the display setup menu.
12. **VOL-:** Press to decrease the volume level.
13. **VOL+:** Press to increase the volume level.
14. **Power Indicator:** Indicates when the secondary unit is ON/OFF.


Product Overview

Remote Control

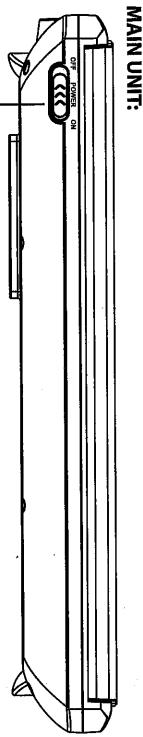

MAIN UNIT:

15. **ON/OFF:** Power ON/OFF switch. Slide to ON position to power on, slide to OFF position to shut off.
16. **PHONE:** Headphone jack.
17. **AV OUT:** Audio/Video output jack.
18. **SD/MMC:** Card slot.
19. **USB:** USB port.
20. **DC OUT:** To connect to the secondary unit.
21. **DC IN:** DC in jack

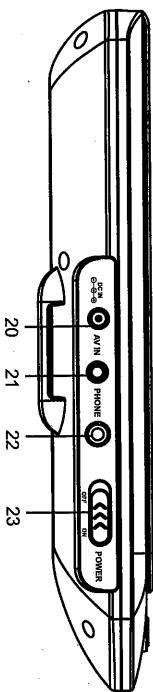

SECONDARY UNIT:

1. **DISPLAY ON/OFF:** To turn ON or OFF the screen.
2. **TITLE:** To display the title menu of current disc. Use the Direction and ENTER buttons to select and play the desired title.
3. **DISC MENU:** To display the menu of current disc. Using the Direction and ENTER buttons to select and play the desired chapter or track.
4. **◀◀ Previous:** Press repeatedly to skip backward.
5. **▶▶ Next:** Press repeatedly to skip forward.
6. **Stop ■:** Press to stop.
7. **Direction buttons:** Press to highlight the options within the setting menu.
8. **SETUP:** Press to enter or exit setup menu.
9. **Numeric buttons:** Press numeric buttons to enter numbers.
10. **PROG (Program) button:** Press to display program setting menu. Use the Numeric/Direction and ENTER buttons to set the program as on screen instructions.
11. **ZOOM:** Press repeatedly to zoom in/out the picture.
12. **DVD/USB/CARD:** When USB device and/ or SD Card was inserted, press repeatedly to select the playback source as desired.
13. **GOTO:** Press to enter GOTO menu. Use the Numeric/Direction and ENTER buttons to select the desired track to play.
14. **SUBTITLE:** Press repeatedly to select the subtitle languages available in the disc.
15. **▶▶ (Fast Forward):** Press repeatedly to search for the desired section. Press ▶▶ button to resume normal playback.
16. **◀◀ (Reverse):** Press repeatedly to search for the desired section. Press ▶▶ button to resume normal playback.
17. **VOL+ (Volume):** Press to increase the volume level.
18. **ENTER:** Press to confirm the selection(settings).
19. **VOL- (Volume):** Press to decrease the volume level.
20. **▶▶(Play/Pause):** Press to play or pause playback.
21. **AUDIO:** Press repeatedly to select the audio channels.
22. **MUTE:** Press to turn off the sound. Press again to resume the sound.

Remote Control


Power Source

The unit has a built-in DC 7.4V 1900mAh Lithium-ion rechargeable battery. Recharge it as follows:

23. **REPEAT:** Press repeatedly to set repeat mode.
24. **A-B:** During playback, press to set the beginning point of A-B repeat. Press again to set the end point of A-B repeat. The unit will start playback at the selected section. To resume normal playback, press the A-B button again.
25. **ANGLE:** Press repeatedly to select the available viewing angle.
26. **OSD (On Screen Display):** Press repeatedly to display the playback information.

Battery Installation:

1. Press the tabs on the battery door and lift it off.
2. Insert two (2) AAA size batteries (We recommend InfiniCell batteries for maximum performance) into the battery compartment. Make sure to match the (+) and (-) ends of the battery compartment.
3. Replace the battery compartment door.

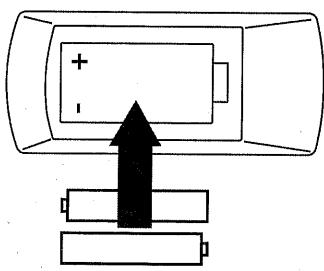

BATTERY PRECAUTIONS:
Follow these precautions when using a battery in this device:

- Only use the size and type of battery specified.
- Be sure to follow the correct polarity when installing the battery as indicated in the battery compartment. A reversed battery may cause damage to the device.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-zinc) or old batteries with fresh ones.
- If the batteries in the device are consumed or the device is not used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge non-rechargeable batteries; they may overheat and rupture (Follow battery manufacturer's directions).
- Do not dispose of battery in fire. Battery may explode or leak.
- Clean the battery contacts and also those of the device prior to battery installation.

Charging by the supplied AC/DC adapter:


1. Connect the plug from the supplied AC/DC adapter to the DC IN Jack on the main unit.
2. Connect the AC/DC adapter to the wall outlet having AC 100-240V/-;50/60Hz.

Notes:

- The AC/DC adapter is intended to be correctly oriented in a vertical or floor mount position.
- Your battery will last longer if you follow these simple guidelines for caring for and storing it.
- For first time charge, charge it approximately 12 hours. For normal charge, it needs approximately 6 hours.
- Recharge and store the device within the temperature range of 5°C-35°C (40°F-95°F). Do not overcharge (longer than 24 hours). Excessive charging or discharging may shorten the battery's life.
- Battery life naturally shortens slowly over time.


Charging by the supplied Car Adapter:

1. Connect to the cigarette lighter socket of a vehicle that has a 12V battery as the figure below. It is NOT compatible with a vehicle that has a 24V battery.
2. This is a special negative grounded car adapter. Using this car adapter with a positive grounded car can cause a malfunction.
3. Do NOT plug in the car adapter until the car ignition is turned on.
4. Disconnect the car adapter from the cigarette lighter and the unit after use.

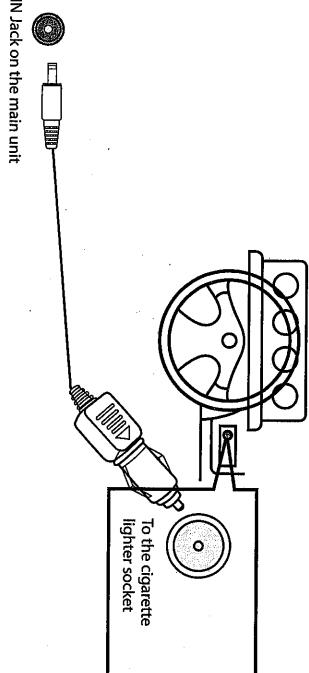


Making Connections

1. Connecting the main unit to a TV with A/V connection cable.

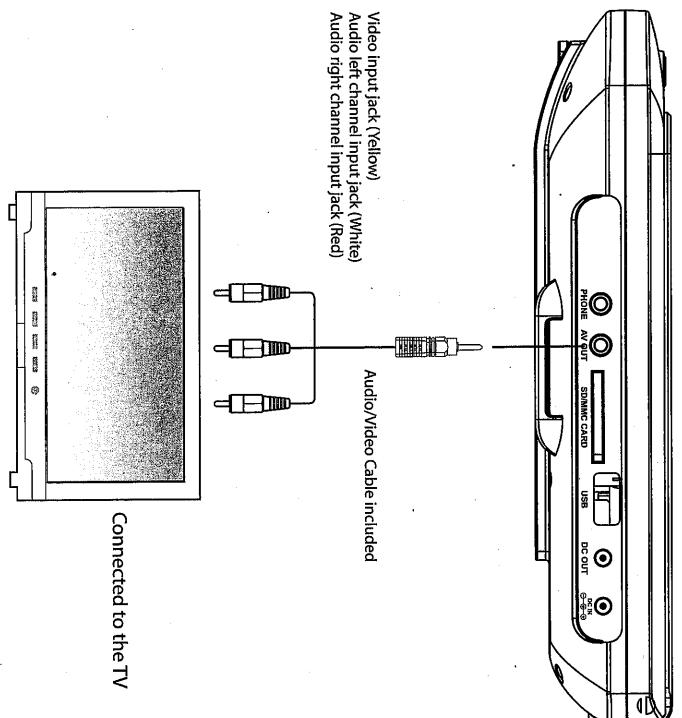

Making Connections

2. Connecting the main unit to the secondary unit.

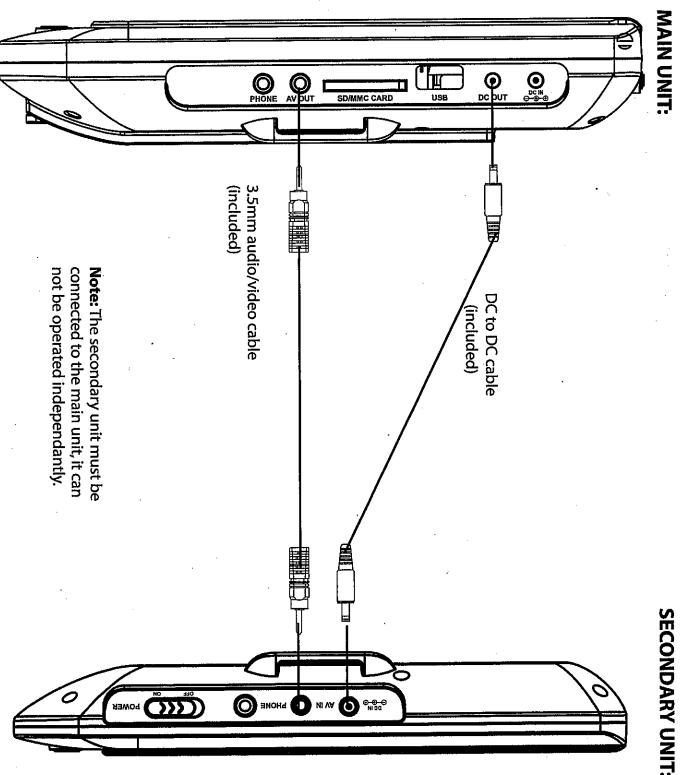

Operation

MAIN UNIT:

1. Recharge or connect the unit to AC/DC Adaptor/Car Adaptor as previous procedure.
2. Press the **OPEN** button on main unit to open the CD door.
3. Insert the disc to the center spindle with label side face up and close the lid.
4. Power on the unit by sliding the **POWER ON/OFF** switch on the rear of unit to the ON position. The green indicator will turn on and the unit will start playback automatically. For private listening, insert headphones into the phone jack. The external speakers will disconnect automatically.
5. To save battery power while listening to music, press the **DISPLAY ON/OFF** button on remote control to turn OFF. Press again to turn it back ON.
6. To power off, slide the **POWER ON/OFF** switch to the OFF position.

SECONDARY UNIT:

1. Connect the secondary unit to the main unit by the supplied DC and AV connection cables as previous procedures.
2. Slide the **POWER ON/OFF** switch on the right side of unit to the ON position to power on the secondary unit.
3. Press the **DISPLAY SETUP** button to enter the display setting menu. Press the **MUTE** or **DISPLAY ON/OFF** to move up and down, and press **VOL +/-** button to set. Press the **DISPLAY SETUP** button to confirm.
4. For private listening, insert the headphones into the phone jack. The speakers will disconnect automatically.
5. To save battery power while listening to music, press the **DISPLAY ON/OFF** button to turn OFF. Press again to turn it back ON.
6. To power off, slide the **POWER ON/OFF** switch to OFF position.

(CD/DVD)PROGRAM:

1. During CD or DVD playback, press the **PROG** (Program) button. The Program menu appears.
2. Use the **numeric** buttons to select and set the desired TT (Title), CH (Chapters), tracks you want of the CD or DVD.

DVD

DVD	
1	TT:02 CH: 01
2	TT: CH: 03
3	TT: CH: 04
4	TT: CH: 05
5	TT: CH: 06
6	TT: CH: 07
7	TT: CH: 08
8	TT: CH: 09
9	TT: CH: 10
10	TT: CH: 11

EXIT START NEXT (■)

CD


CD	
1	02
2	04
3	05
4	06
5	07
6	--
7	--
8	--
9	--
10	--

EXIT START NEXT (■)

3. Use the **direction** buttons to move to the next input. Repeat step 2 until programming is completed. **Note:** Press **■** to go to next page for programming track 11 to 20.
4. Highlight the "PLAY" icon, press the **ENTER** button to start the program play.
5. Press the **STOP ■** button twice to stop the program playback and clear the program memory.

USB or SD/MMC Card Playback

1. Insert the USB Device or SD/MMC memory card into the USB port/card slot as shown on the figure below.

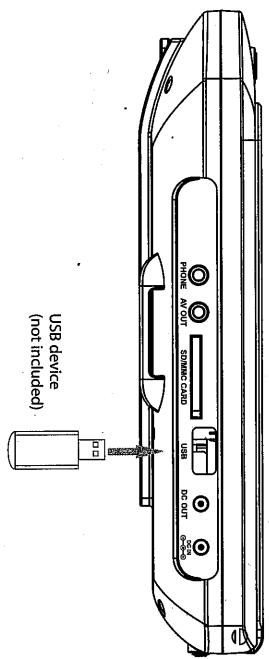

Note: The unit supports the following file formats:

- MP3; WMA (Music file)

- JPEG (Pictures)

- MPEG2; AVI; VOB (Video files up to 640 x 480 pixels)

Make sure correct files were saved in the USB device or memory cards.

2. Power ON the unit, and wait until "No disc" appears on the screen or the disc starts to play. Press **DVD/USB/CARD** button to select the desired playback source. Wait until the folder/file list appears on the screen. Use the **Direction** buttons to select the desired file, then press the **ENTER** button to start playback.

Setting Menu

Setting Menus:

In fully stop mode, press the **SETUP** button on the remote control, the setting menu will appear on the screen as below. Use the **Direction** **▲**, **▼**, **◀**, **▶**, **Numeric** and **ENTER** buttons to select and highlight the function you need to set or reset. Press the **ENTER** button to enter or confirm the selection. After setting, press the **SETUP** button to save the settings and exit.


-- General Setup Page --	
	TV Shape Wide
	Angle Mark On
	OSD Lang Eng
	Captions Off
	Screen Saver On
	Last Memory Off

[Go To General Setup Page](#)

IN GENERAL SETUP PAGE:


1. If the TV shape is selected, use the **Direction** and **ENTER** buttons to set the aspect ratio to match the connected TV.
2. If Angle Mark is selected, use the **Direction** and **ENTER** buttons to set it On or Off. If set to On, when multi-angles are available in the playing DVD, the multi-angle logo will appear on the screen.
3. If OSD Lang (On Screen Display Language) is selected, use the **Direction** and **ENTER** buttons to set the OSD language as desired.
4. If Captions is selected, use the **Direction** and **ENTER** buttons to set it On or Off. If set to On, when multi-language are available in playing disc, the captions will appear on screen.
5. If Screen Saver is selected, use the **Direction** and **ENTER** buttons to set it On or Off. If set to On, the screen saver will come on when the unit stops or the image is paused for approximately five minutes.
6. If Last Memory is selected, use the **Direction** and **ENTER** buttons to set it On or Off. If set to On, the unit will start playback from the position where the disc was stopped last time.

Setting Menu

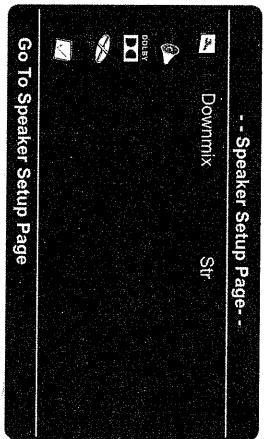

IN SPEAKER SETUP PAGE:


- If Speaker Setup is selected, press the **ENTER** button, the sub-setting menu will appear.
- If Downmix is selected, use the **Direction** and **ENTER** buttons set it to L/R/Stereo. If set to L/R, the rear left or rear right channels will play on both Left and Right Speakers.
- If set to Stereo, the rear left channel will play on left speaker; the rear right channel will play on right speaker.

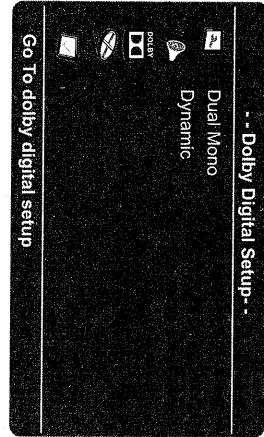

IN DOLBY DIGITAL SETUP PAGE:

- If Dual Mono is selected, use the **Direction** and **ENTER** button to set it to Stereo, L-Mono (Play Left channel on all speakers), R-Mono (Play Right channel on all speakers) or Mix-Mono (Mixed Right and Left channel then plays on all speakers) as desired. (Functions depend on the recording of the disc.)
- If Dynamic is selected, use the **Direction** and **ENTER** button to set the dynamic level as desired or turn it off.

Setting Menu

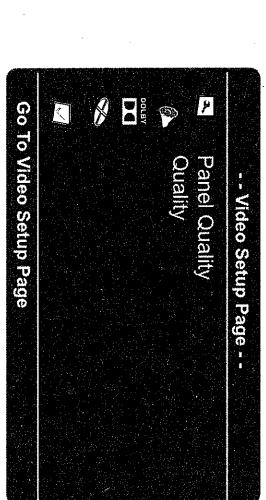

IN VIDEO SETUP PAGE:

- If 'Picture' is selected, use the **Direction** and **ENTER** buttons to set the panel quality (Sharpness, Brightness, Contrast, Hue or Saturation) as desired.
- If Picture Quality is selected, use the **Direction** and **ENTER** buttons to set the Sharpness, Brightness, Contrast, Gamma, Hue or Saturation of the video input signal as desired.

Sharpness: To adjust the sharpness of video output

Brightness: To adjust the video brightness level on a scale of -20 to +20.


Contrast: To adjust the video contrast level on a scale of -16 to +16.

Gamma: To adjust the video display gamma level (High, Medium, Low or None)

Hue: To adjust the color hue level on a scale of -9 to +9.

Saturation: To adjust the color saturation level on a scale of -9 to +9.

Setting Menu

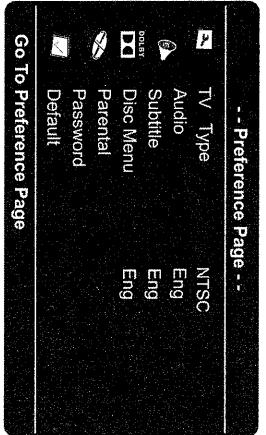

Setting Menu

4. If Password is selected, press **ENTER** button to enter the subsetting menu will appear.
- If Password Mode is selected, use **Direction** and **ENTER** buttons to set it ON (activate the rating level setting) or OFF (Password is needed).
- If Password is selected, press **ENTER** button twice to enter. The New password setting menu will appear.
- Enter the four digit old password. The Column of New Password will be highlighted.
- Enter the new four digit password. The Column of Confirm Pwd will be highlighted.
- Enter the new password again. OK Button on the screen will be highlighted. Press the **ENTER** button to save the setting and exit.
5. If Default is selected, use **Direction** and **ENTER** buttons to reset all settings to default settings or press the **SETUP** Button to exit without changes.

IN PREFERENCE SETUP PAGE:

1. If TV Type is selected, use the **Direction** and **ENTER** buttons to set to PAL, AUTO or NTSC. (**NOTE:** The TV system in USA, Canada and Mexico is NTSC.)
2. If Audio, Subtitle or Disc Menu is selected, use the **Direction** and **ENTER** buttons to the priority of the available language. (Function depend the recording of DVD).
3. If Parental is selected, use the **Direction** and **ENTER** buttons to set the rating level as follows:
 - Press the **▶** button to enter, the rating level list will appear.
 - Press the **▲** or **▼** button to select the desired level.
 - Press the **ENTER** button to enter, password enter window will pop up.
 - Enter the six digit password (default password is **136900**) by pressing the **Numeric** buttons.
 - Press the **ENTER** button to save the settings and exit.

RATE LEVELS:


- 1 (Kid Safe): Safe for kids
- 2 (G): All ages
- 3 (Pg): Parental guidance
- 4 (Pg 13): Parental guidance less than 13 years old
- 5 (Pgr): Under 17 years old, parental guidance suggested
- 6 (R): Under 17 years old, parental guidance strongly suggested
- 7 (Nc 17): 17 years old and older
- 8 (Adult): Adults only

Care and Maintenance


CARING FOR DISCS

Treat the disc carefully. Handle the disc only by its edges.

Never allow your fingers to contact with the shiny/unprinted side of the disc.

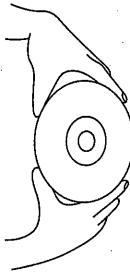

- Do not attach adhesive tape, stickers, etc. to the disc label.
- Clean the disc periodically with a soft, lint-free, dry cloth. Never use detergents or abrasive cleaners to clean the disc. If necessary, use a CD cleaning kit.
- If a disc skips or gets stuck on a section of the disc, it is probably dirty or damaged(scratched).
- When cleaning the disc, wipe in straight lines from the center of the disc to the outer edge of the disc. Never wipe in circular motions.

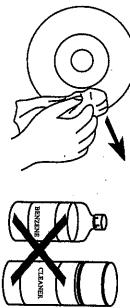

- Discs should be stored in their cases after each use to avoid damage.
- Do not expose discs to direct sunlight, high temperatures or dust, etc. Prolonged exposure or extreme temperatures can warp the disc.
- Do not stick or write anything on either side of the disc. Sharp writing instruments, or the ink, may damage the surface.

CLEANING THE UNIT

- To prevent fire or shock hazard, disconnect your unit from the AC power source when cleaning.
- The finish on your unit may be cleaned with a dust cloth and cared for as other furniture. Use caution when cleaning and wiping the plastic parts.
- Mild soap and a damp cloth may be used on the front panel.

Specifications

Power source of main unit.....

Built-in DC= 7.4V, 1900mAh Lithium-ion rechargeable battery, recharge by DC= 12V, 1.5A \ominus - \oplus

AC Adapter.....

Input: 100-240V~, 50/60Hz
Output: DC= 12V, 1.5A \ominus - \oplus

Car Adapter.....

Input Voltage: DC= 12V
Output Voltage: DC= 12V, 2A \ominus - \oplus

Power source of remote control:.....

DC= 3V, 2 x AAA size batteries
DVD/±R/DVD/±RW

Disc compatibility:.....

Power consumption.....

18W (Max)

Battery charging time.....

Approximately 8 hours

Battery life (full charge).....

Approximately 3 hours

Specifications are subject to change without notice

WHAT'S INCLUDED:

- 1 x User's Manual
- 1 x AC/DC Adapter
- 1 x Remote Control
- 1 x Car Adapter
- 1 x 3.5mm Audio/Video Connection Cable
- 2 x Headrest Straps
- 2 x Headphones