

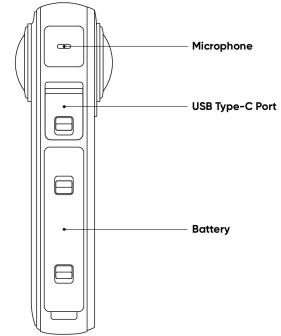
 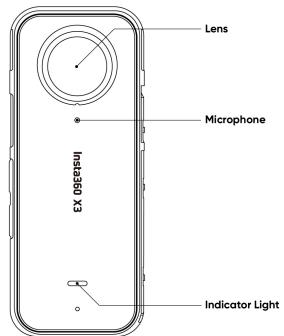
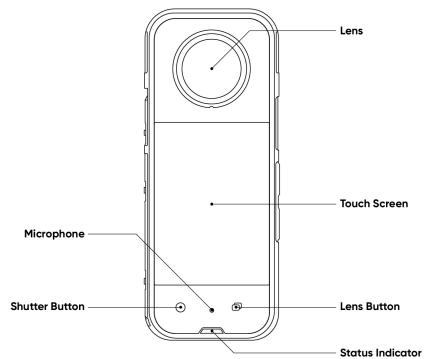


Product Introduction



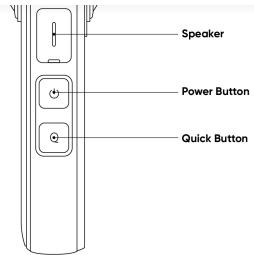

Before You Start

1. Use 5V/3A adapter and official charging cable to charge the camera to ensure sufficient power.
2. Take out the battery and insert a MicroSD card.
3. Insert the battery with the 'UP' arrow pointing towards the camera lens.

Note:

1. Please use exFAT format microSD cards of speed classes UHS-I and V30 to ensure normal recording. The maximum supported storage space is 1TB. For specific info on supported microSD card models, see [here](#).
2. Make sure that the orange indication marks are covered by the latch to ensure waterproofing is not affected.

Was this
information
helpful?

