


Controller Appearance and Button List

- 1 Joystick
- 2 Power Indicator
- 3 FIRE Button
- 4 RESET
- 5 ON/OFF
- 6 SELECT
- 7 START

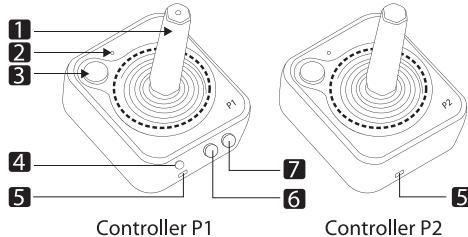

NOTE: POINT CONTROLLER AT CONSOLE FOR BEST EXPERIENCE

Changing The Batteries For The Controller


Remove the battery compartment cover using a screwdriver.

Place two AAA batteries into the battery compartment. Make sure they are inserted with the correct polarity as shown inside the battery compartment.

Secure the battery compartment cover by clipping it back to place and using the screwdriver to tighten the screw.

(Screwdriver is not included in the package of this product.)

Requires 2 AAA batteries. Expected battery life up to 150 hours.

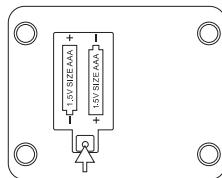

Battery Safety

- * Never try to short-circuit the battery terminals.
- * Rechargeable batteries are to be removed from the toy before being charged.
- * Rechargeable batteries are only to be charged under adult supervision.
- * Do not charge non-rechargeable batteries.
- * Batteries are to be inserted with the correct polarity as indicated inside the battery compartment.
- * Do not mix old and new batteries. Do not mix batteries of different types: standard (carbon-zinc), alkaline, or rechargeable (nickel-cadmium)
- * Remove batteries during long period of non-use.
- * Always remove flat batteries from the product.
- * Dispose batteries safely. Do not dispose this product or any batteries in a fire.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ATARI FLASHBACK[®] 7
classic game console



AtGAMES
AtGames Digital Media Inc. www.atgames.us

BUILT-IN 101 GAMES
INSTRUCTION MANUAL
(MODEL NO.: AR3210)





IMPORTANT: READ BEFORE USE

In very rare circumstances, some people may experience epileptic seizures when viewing flashing lights or patterns in our everyday life. Flashing lights and patterns are also common to almost any video game. Please consult your physician before playing ANY video game if you have had an epileptic condition or seizure OR if you experience any of the following while playing - Altered vision, eye or muscle twitching, mental confusion or disorientation, loss of awareness of the surroundings or involuntary movements.

It is advised to take a 20-minute rest after 1 hour of continuous play.

Game Console Appearance and Button List

The image below shows the location of the output ports and buttons. (The illustration is for reference only.)

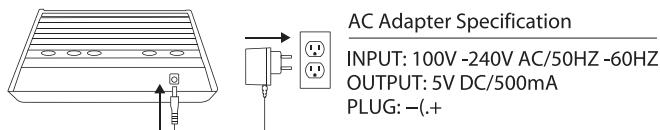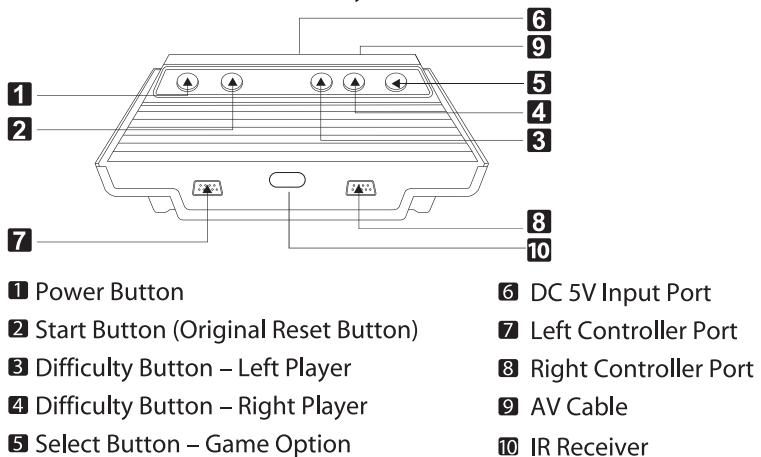

NOTE:

Must use the AC adapter included as power supply to the console. Do not connect the AC adapter to the power input other than the above specifications. AC adapter is not a toy.

The socket-outlet shall be installed near the equipment and shall be easily accessible

How to connect the ATARI console to a TV?

Connect the game console to TV using the enclosed AV cable. Configure the TV input source to AV in, then press the POWER button on the game console. The console will detect the presence of a TV and display the game menu on TV screen automatically.

NOTE: For Plasma & LCD TV of over 32", please adjust your TV to the following setting for the best display result.

Back-Light: 100 Brightness: 36 Contrast: 70
Color: 60 Sharpness: 60 Aspect Ratio: 16:9

How to connect the wireless controllers with the console?

Switch the ON/Off button on the controllers to ON and the controllers will automatically connect with the console.

What are the two controller ports on the console for?

These ports are for the wired controllers (optional) and wired paddles (optional). These ports are also compatible with the original Atari 2600 wired controllers and paddles.

How to connect the wired controllers?

(Wired controllers are not included in this product.)

For 1-Player Games: Connect a wired controller to the left controller port.

For 2-Player Games: Connect a wired controller to the left controller port for player one, and connect another wired controller to the right controller port for player two.

How do I play the 4-player games?

The 4 player games are designed to be played by paddles. Please plug in your paddle controller(s) into controller port(s) on the game console.

How do I start playing?

1. Press the POWER button to turn on the game console. Press the POWER button again if you like to turn off the game console.
2. Use the player 1 (P1) wireless controller or use the wired controller that is connected to the left controller port to browse menu and select game: Move the joystick of P1 controller left and right to navigate the menu pages, and move the joystick up and down to highlight games on each menu page. Press the FIRE (red) or SELECT button on the wireless controller to enter the selected game.

3. Press the "START" on the game console to begin the game.
(For the games Aquaventure, Fatal Run, Gravitar and Swordquest: Earthworld, press the "FIRE" button on the controller to begin the game.)

How do I pause / unpause the game?

To pause, press and hold the FIRE button and a few seconds the SELECT button for a few seconds.

To unpause, press and hold the FIRE button and the START button for few seconds.

How do I switch back to game menu while playing a game?

Press the START and the SELECT buttons simultaneously on the main console, or press the RESET button on the wireless P1 controller, and the screen will go back to the game menu.

How do I adjust the game level?

Press "SELECT" on Main console, and then press "START" to begin the adjusted level.

PROBLEM	SOLUTION
No picture on the screen	Connect the AC adapter Connect the A/V cable Turn the console unit on Turn the TV on Set the TV to A/V input
Screen flickers or no color	Adjust TV color controls
No game sound	Increase or turn on the TV volume Connect the A/V cable
Picture on TV screen is unsteady	Adjust the vertical and horizontal hold controls on your TV until the picture becomes steady Re-connect A/V cable
Picture is blinking or distorted	Power off the console and then power on the console
Picture background color varies at the beginning or end of the game	This is normal Press START to enter or restart the game