




Photography Lighting Kit Instructions

Background Stand

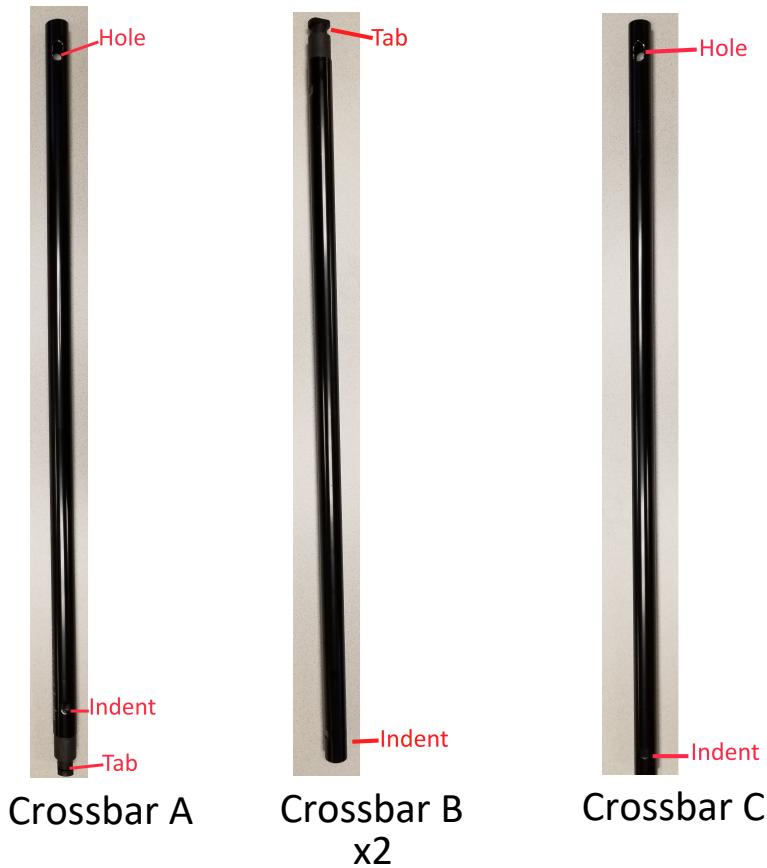

1. Loosen knob to open legs of stand to desired width and set upright.
2. Slide tab of crossbar A into indented end of crossbar C. Rotate A to latch tab on indentations of C.
**If a wider backdrop is desired, please insert one or both copies of crossbar B between A and C.*
3. Attach ends of attached crossbars to pegs at top of stand's legs using provided wingnuts and washers.
4. Drape backdrop over the crossbar and fasten securely using background clamps.
5. Loosen release screw on side of stand's legs to telescope bars to desired height.

Umbrella Light

1. Loosen knob to open legs of light stand to desired width, refasten knob and set upright.
2. Attach light fixture to peg at top of light stand and use knob to secure it firmly in place.
3. Loosen knob at hinge to adjust to desired angle and refasten to hold in place.
4. Put bulb into the fixture.
5. Slide umbrella into hole just below bulb so that light is directed into the inside of umbrella and secure with accompanying knob.
6. Use latches near top of poles to adjust to desired height.

Softbox

1. Loosen knob to open legs of light stand to desired width, refasten knob and set upright.
2. Attach light fixture to peg at top of light stand and use knob to secure it firmly in place.
3. Put bulb into the light fixture.
4. Place softbox cover (outer diffuser, this kit does not contain inner diffusers) over opening making sure corners are firmly over the rods.
5. Fasten into place using the velcro.