

MODEL: W-BR146



Table of Contents

Safety Precautions	1
Package Listing	4
Optical Discs.....	5
Connections.....	6
Function Overview.....	8
Remote Control.....	11
Basic Operation	13
Special Features.....	18
General Settings	19
Specifications	23
Troubleshooting.....	24
Warranty.....	25

We provide 12 MONTHS warranty from the date of purchase, if you experience
any problem not covered by Troubleshooting,

please don't hesitate to email us at:

us-dvd-146@eitack.com

Warning

To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.

High Voltage Warning


Dangerous high voltages are present inside this enclosure. To avoid electric shock, DO NOT open the unit; refer servicing to qualified personnel only.

Laser

- This player is classified as a CLASS 1 laser product to prevent direct exposure to the laser beam, do not try to open the DVD player.
- Do not attempt to dismantle the player. You may become exposed to invisible laser radiation if the product is open or the interlock is tampered. Avoid direct exposure to beam laser.

Notice and Safety Information

1. **User Notice:** Please read the user manual carefully before using to avoid incorrectly using or damaging the device and keep this manual in a safe place for future reference.
2. **Disc:** Damaged, broken, or distorted discs do not work in the DVD player. These types of discs will be read incorrectly and will cause damage.
3. **Inspection:** Be sure the unit and power adapter are undamaged.
4. **Repair:** Be sure to use the correct plug and socket. Please contact WONNIE for all repair issues. Do not attempt to repair the device yourself.
5. **Volume:** Adjust volume to a comfortable level when using earphones. Listening at high volumes for long periods of time may damage hearing.
6. **Humidity and Wet Areas:** To avoid electric shock and fire accident, do not leave the DVD Player in the rain or in humid weather and do not touch the DVD Player with wet hands. Avoid contact with water and keep the DVD Player away from wet areas such as bathtubs, bathrooms, water basins, kitchen sinks, washrooms, and swimming pools. Do not open the cabinet so as to avoid direct radiation of the laser.
7. **Keep Away From Liquid:** Make sure DVD player is kept away from liquids and wet environments to avoid damage and electronic shock.
8. **Avoid High Temperatures:** Keep DVD player away from high heat such as a heater or induction cooker.
9. **Avoid Using During Thunderstorms:** Do not use DVD player in thunderstorm conditions.
10. **Environment and Ventilation:** DVD player and spare should be stored in ventilated environment. Leaving the DVD player on a bed, sofa, or other soft surface may block ventilation and cause the DVD player to overheat or cause a fire.
11. **LCD Screen:** Do not drop, put pressure on, or scratch the LCD screen. Do not place heavy items on the DVD player to avoid screen damage.
12. **Environment and Ventilation:** This DVD Player is equipped with a laser system. Please become familiar with the instructions of this manual to help you use this player properly. Do not open the interlock mechanism. Staring at the laser beam could cause visible radiation eye damage. If a repair is needed please contact the distributor or our technical service center.

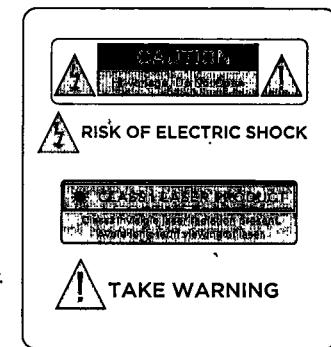

Battery and Charging

This player is powered by a lithium-polymer battery. It features a high ratio of energy to weight. It has no memory effect and it can be recharged at any time regardless of whether it is fully or partially discharged.

To protect and extend the life time of both battery and device, it is designed Protection Mechanism inside (when the Power below 80%, it will start charging, if you try to charge the item only few minute's use when its full of power, the red light may not come on.)

There are two indicator lights on the keyboard bottom of the player.

(1) One is working indicator light on the right, blue led light will light up when you turn on the player, and turn off when turn off the player.

(2) One is charging indicator light on the left, it will light up and is red, it will turn off when power up to 80% (Power protection mechanism). In charging time, when you first see red charging indicator turn off and turn to blue light, you should charge about 2 hours more to full power. When it is less of power, usually it takes about 3-4 hours to full charge, but it needs for 7-8 hours if it is used while charging.

NOTE

1. Do not operate the product with wet hands. Doing so may cause electric shock.
2. Always turn the power off and remove the adapter from the outlet when the appliance is not to be used for a long period of time and before cleaning.
3. Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them.
4. Do not let the power cord hang over the edge of a table or bench top or touch any hot surface.
5. Do not operate the appliance with a damaged cord or after the appliance has been dropped or damaged in any manner. If damage is suspected, do not attempt to repair or disassemble the appliance by yourself. Contact qualified service personnel if you need help.

Maintenance and Long-Term Use

1. If the charging indicator light turns green quickly when charging the device from a low or dead battery, the battery needs to be replaced. Please contact customer service.
2. If the battery begins to leak fluids, discharge acid buildup around the terminal, or gives off a smell, please dispose of the battery immediately following proper safety measures.

NOTE: The built-in high capacity rechargeable batteries must only be removed or replaced by a professional. Do not attempt to do yourself.

Operation and Position

1. To avoid an explosion or release of poisonous gas, do not put the battery in fire or any high temperature place.
2. Do not install battery while DVD Player is charging or playing.
3. Do not put the battery into water or other liquids.
4. Do not throw, toss, crush, or use excessive force on the battery.
5. Do not open the battery and tamper with it.
6. When using the DVD Player, adjust the volume to a comfortable listening level.
7. Before charging the device, use up the existing charge.
8. Use in temperatures: -4-122°F

Clean and Care

1. Always turn the power off and unplug it from the outlet before cleaning.
2. Never spray or pour liquids directly on the screen or plastic casing, and clean with a dry towel only.
3. Do not clean the unit with strong chemical agents or abrasive cleaners.
4. Do not allow residue or liquids to enter any part of the appliance as this may cause risk of electrocution.
5. Be sure to remove the disc from the player before packing for moving.

Trademark Notice

1. DVD Logo is a trademark of DVD Format / Logo Licensing Corporation.
2. The Blu-ray Disc™, Blu-ray™, BD-Live™, BONUSVIEW™ word marks and logos are trademarks of the Blu-ray Disc Association.
3. Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.
4. For DTS patents, see <http://patents.dts.com>. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS 2.0+Digital Out is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
5. Java and all other Java trademarks and logo are registered trademarks of Oracle and/or its affiliates.
6. The terms HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
7. SDHC Logo is a trademark of SD-3C LLC.

Cinavia Notice

This product uses Cinavia technology to limit the use of unauthorized copies of some commercially-produced film and videos and their soundtracks. When a prohibited use of an unauthorized copy is detected, a message will be displayed and playback or copying will be interrupted.

If playback or copying is interrupted and one of the messages shown below is displayed, the content is an unauthorized copy protected by Cinavia technology.

Message	Cinavia Message Code
[Message(s) 1]	1
[Message(s) 2]	2
[Message(s) 3]	3
[Message(s) 4]	4

More information about Cinavia technology is provided at the Cinavia Online Consumer Information Center at <http://www.cinavia.com>. To request additional information about Cinavia by mail, send a postcard with your mailing address to: Cinavia Consumer Information Center, P.O. Box 86851, San Diego, CA, 92138, USA.

IPR Message

Copyright 2004-2013 Verance Corporation. Cinavia™ is a Verance Corporation trademark. Protected by U.S. Patent 7,369,677 and worldwide patents issued and pending under license from Verance Corporation. All rights reserved.



Package Listing

 
Please make sure the following items are included in package, if any item is damaged or missed, please contact us.




Portable DVD Player




User Manual




Remote Control

 

Car Charger

 

 3.5mm-RCA Cable



AC Power Adapter

Quick Keys of Accessories

AC Power Adapter (To charge for the player)	Insert small plug into DC IN 12V jack on the player, other end insert into AC 100V-240V/50-60Hz wall outlet.
Car Charger (To charge for the player)	Insert small plug into DC IN 12V jack on the player, other end insert into the cigarette lighter socket.
3.5mm-RCA Male Cable (Synchronize the video/audio from another DVD player)	<p>Option A</p> <p>(1) Connect a 3.5mm RCA female cable (not included) (2) Insert small plug into AV IN on the player, the other end plug into AV OUT on another player.</p> <p>Warm Tips for Two RCA Cables Connecting: The equipped RCA cable is male cable. RCA female cable don't included. since the difference of two cables' plug function, when it happened that the other player doesn't response, please try to connect other plugs make sure connect correctly.</p> <p>Option B</p> <p>Use an AV cable (not included) connect the Blu-ray DVD and Another DVD player</p>
Remote Control	Before use, please place 2*AAA small batteries and point towards senior area (between red charging light and blue working light on the keyboard bottom of the player) at an angle of up to 30 degree in 16.5ft.

Optical Discs

Disc Requirements

This DVD player is available to play Blu-Ray DVDs from A (1) region and Standard DVDs from any (1-6) region. (please select a play option in the menu and press OK button if you would like to Japanese play CPRM disc). Supported Disc Formats: BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW.

Type	Disc Mark	Content Type	Disc Size	Max.Playback Time
DVD-Video Discs		Audio + Video (Moving picture)	12cm	133 min (SS-SL) 242 min (SS-SL) 266 min (DS-SL) 484 min (DS-SL)
Audio Compact Discs (CDs)		Audio	12cm	74 min
JPEG Photo CDs	--	Still Picture	12cm	--


This unit can play CD-R and CD-RW discs that contain JPEG picture files. This unit doesn't support the discs, which are not listed above (e.g., PC CD-ROM, CD-Extra, CD-G, CD-I, etc.)

Disc Care And Maintenance

Optical discs (DVD, VCD, CD) contain high-density compressed data and need proper handling.

Handle A Disc

1. Hold a DVD/VCD/CD disc by its edge.
2. Avoid touching the recorded side of the disc. To remove a DVD/VCD/CD from its storage case, press down on the center retention mechanism of the case and lift the disc out.
3. Do not subject discs to prolonged exposure to direct sunlight, high humidity, or high temperatures. Do not bend or press disc.
4. To reduce the risk of scratches, always put disc back in its case after use. Store disc vertically in a cabinet.
5. Do not place stickers or labels on either side of a disc.

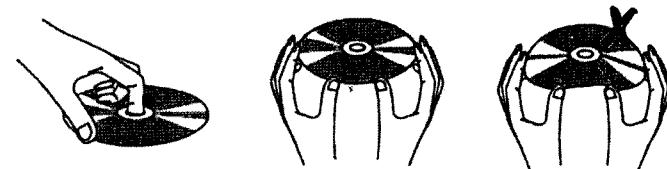

Clean A Disc

1. Use a dry, soft cloth to wipe off any fingerprints and dusts from the playing surface of the disc.
2. Wipe in a straight line radically from the center to outside edge of the disc. Small dust particles and light stains will not affect playback quality.
3. Never use chemicals such as record sprays, anti-static sprays, benzene, or thinners to clean a disc. Doing so will damage the surface of the disc permanently.

Connections


Connect to TV/ Projector with HDMI Cable

Connect the HDMI cable (not supplied) to the HDMI Jack on this product and to the HDMI input jack on the TV/Projector

It is recommended to change the DVD player resolution to AUTO, it will automatically display the best pixels for your TV/Projector.

Tips

1. You can optimize the video output by pressing the Resolution button repeatedly from the remote to select the best resolution the TV can support.
2. To play the digital video images of a BD-video or DVD video via an HDMI connection, it is necessary that both this product and the display device (or an AV receiver/amplifier) support a copyright protection system called HDCP (high-bandwidth digital content protection system)
3. This type of connection provides best picture quality.

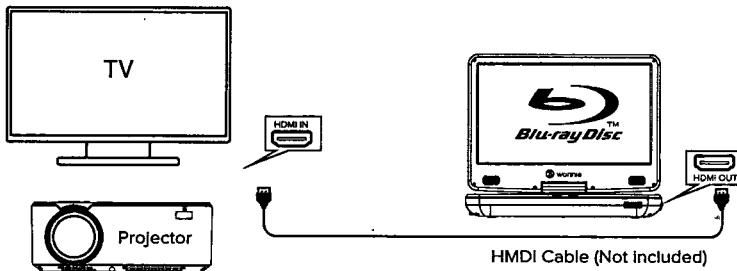

Connect to another DVD Player


1. Option A :

- (1) Please use a 3.5mm-RCA male cable (Included) connect 3.5mm-RCA female cable (not included).
- (2) Insert small plug into AV IN port on the Blu-ray player, the other end plug into AV OUT port on another player.

Option B: Use an AV cable (not included) connect the Blu-ray DVD and Another DVD player.

2. Turn on the connected player by switching the Power Button to the ON position.
3. The Blu-ray player set in AV mode, another player set in DVD mode and put into DVD to play.
4. Two player can play the same movie at the same time.

Note: The connected DVD player should have AV Output port. If necessary, please contact us after purchase, and we will provide you with a detailed connection guide.

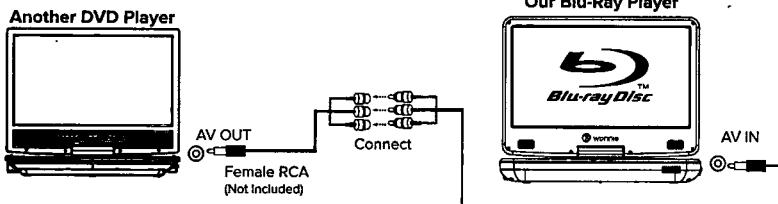

Connecting Power Supply AC Adapter Operation

Insert the small plug of the supplied AC adapter firmly into the DC IN 9V-12V Jack on the right side of the player, and then insert the adapter into an available AC 100-240V*50-60Hz wall outlet.

NOTE: Make sure to use correct plug and all other connections have been made, before connecting the supplied AC adapter to the wall outlet.

Warning


1. Only use the supplied adaptor. Do not connect the adapter to a power outlet other than which is indicated here and on the label as this may result in the risk of fire or electric shock.
2. Never make or change any connections with the power switched on.
3. Do not handle the plug of adapter with wet hands, it may cause electric shock.

Car Charger Operation

Before connecting the supplied car charger, ensure that all other connections have been made. Insert the small plug of the supplied car charger firmly into the DC IN Jack on the right side of the player, and then insert the other end into the Cigarette lighter socket.

Warning

1. Disconnect this car power charger when the unit is not in use for long period of time.
2. Only the DC 12V of the automobile cigarette lighter socket can be used, DO NOT plug the car charger to any automobile cigarette lighter in DC 24V. Connecting the car charger to a power supply with a different voltage can damage the unit.
3. The Car charger is for in-car use only.

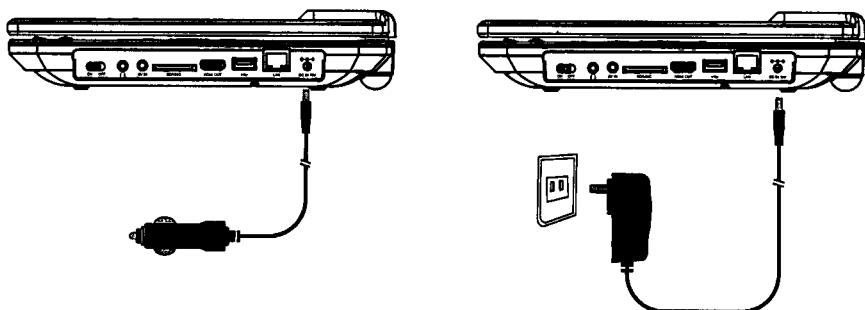

Note

1. This portable DVD player requires using wall AC Adopter or Car Charger to power it.
2. Do not use the unit in high temperature or near heat sources.
3. The product has a voltage protection, the player needs to be disconnected from the power supplier in order to reset it if there is no power or response during the operation.

Function Overview

Quick Starting Guide

1. Connecting to an External Power Source

Connect the power adapter (supplied with the player) to the side input plug and to a wall outlet. Do not use any other device otherwise specified by your dealer.

2. Open the screen panel.

The screen panel of the portable DVD opens to a maximum 180°. And it can rotate 270°.

3. Press the open button to open the disc cover.

4. Insert a DVD disc with label side facing upward.

Align the center of the DVD disc with the center of the disc guide. Press gently down on the DVD to snap the disc into place, and then close the disc cover.

5. Slide the power switch on the right side of the unit to power it on.

6. Press the OK button on the unit to start playback.



Tips:

1. In most cases, when you leave by the PLAY/PAUSE button, continue to be used by PLAY/PAUSE button.

2. The DVD player will immediately start rendering the DVD program.

When you want to stop, press the STOP button, it will return to the power-on logo. The player can be recharged while playback.

3. When you don't use it in long time, please switch ON/OFF to OFF at right side of the player.

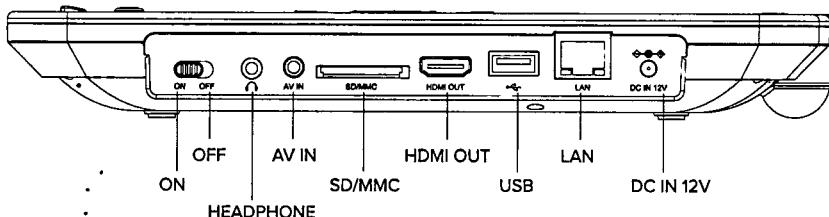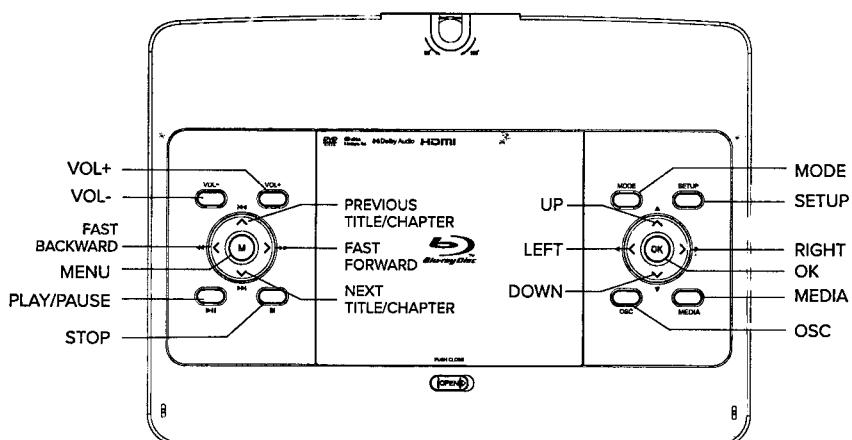

Button and Panel Functions of DVD Player

Left button on the keyboard

VOL -/VOL +	Press VOL- to turn down the volume, Press VOL+ to turn up the volume
◀◀	Press to skip previous chapters or a title.
▶▶	Press to skip next chapters or a title.
◀◀◀	Press to fast rewind.
▶▶▶	Press to fast forward.
M	To open the top menu of BD/DVD video disc.
▶▶	Press to pause or continue current play
■	Press once to stop playing and return to home page, press the button ▶▶ to play from where you leave last time, Press twice to stop playing and return to home page, press the button ▶▶ to start playback from the beginning

Right button on the keyboard

MODE	Press to switch DVD or AV IN modes.
SETUP	Press SETUP to access general setting/TV setting/audio setting, you will navigate the setup menu when use the directional arrow. When press SETUP again to exit SETUP menu
ARROWS (Direction keys)	"UP" or "DOWN" or "LEFT" or "RIGHT", Press direction keys to navigate menus.
OK	Press to confirm and execute a selection
OSC	Access options relating to the current activity or selection, and control the video playback
MEDIA	Press to select media source USB or SD/MMC

Right sides on the keyboard

DC IN	Power port for AC adapter or Car charger
LAN	Connect the network cable (Note: BD live resources have stopped updating. You may not be able to obtain online resources by using LAN port connection)
USB	Slot to insert USB device
HDMI OUT	Video output
SD/MMC CARD	Slot to Insert SD/MMC card
AV IN	Video Input
Headphones	Headphone or any auxiliary output (eg, External speaker)
POWER ON/OFF	Turn on or off the dvd player


Downsides on the keyboard

Working Light	Working Indicator light is on the right, blue led light will light up when you turn on the player, and turn off when turn off the player
Charging Light	There are two indicator lights on the keyboard bottom of the player. 1. One is working indicator light on the right, blue led light will light up when you turn on the player, and turn off once shut off the player. 2. One is charging indicator light on the left, it is red at most time while charging. In a charging time, when we first see red charging indicator turn blue (Power protection mechanism, power up to 80%), you should charge about 2 hours more to full power. When it is less of power, the red indicator light starts to flash, and the following are two charging conditions: 1. It usually takes 3-4 hours to fully charge when the player is turned off. 2. It will take 7-8 hours to fully charge if you use it while charging
Remote Control Receiver	Receive the signal from remote control, work well when aiming near blue working indicator at an angle of up to 30 degree in 16.5ft

Remote Control

Operating with the remote control

1. The remote control must point at the remote sensor, in order for the DVD player to function correctly.
2. The remote works best at a distance less than 16.5ft and at an angle of up to +/-30° toward the front of the unit.

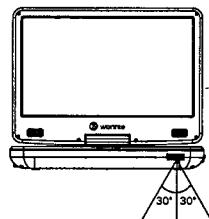

NOTE: Obstacles should not remain in between the remote control


Using the Remote Control

1. Before using the remote control, please make sure you have installed two new AAA batteries inside in correct way.
2. When use the remote control to remote the player, kindly direct the sensor area.
3. The remote control works best at a distance less than 16.5ft and at an angle of up to 30 degree to the front of the unit.
4. Please make sure no obstacles stand in the way between remote control and Infrared sensor and do not place the remote control in direct sunlight. If the remote control fails to work even when it is operated near the monitor, kindly first to replace new battery to try again.

Notes on batteries

1. If the remote control is not used for a long period of time, please remove the battery from the compartment.
2. Do not heat batteries or dispose of them in fires.
3. Do not dismantle, deform or modify batteries.
4. Please keep the battery in a safe place to prevent swallowed by kids.


Requires two AAA batteries (not included)

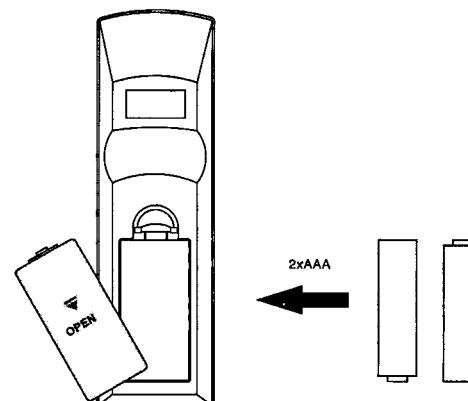

Buttons of the remote control

Tips: We could find more details when checking remote control from up to down.

Note: Below function is based on the disc supports or not.

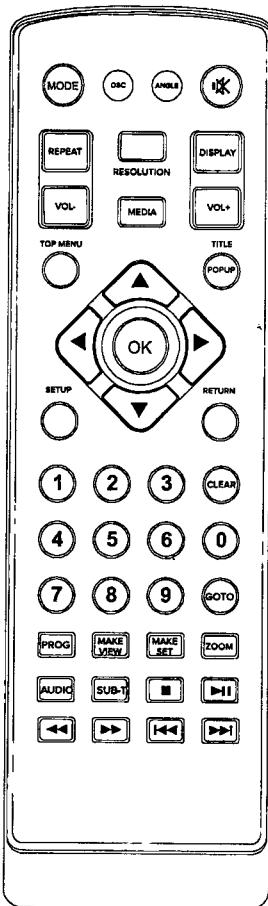

■	Press once to stop playing and return to home page, press the button ▶▶ to play from where you leave last time. Press twice to stop playing and return to home page, press the button ▶▶ to start playback from the beginning.
▶▶	Start (resume) / pause play.
◀◀ ▶▶	Press to fast-forward or rewrd.
◀◀ ▶▶	Press to skip between chapters or a title.

Basic Operation

Tips

1. You could remove this sticker on the screens before using. It will be no influence on normal use.
2. Do not put any objects other than disc on the disc tray. Doing so may cause the player to malfunction.
3. Depending on the discs, some operations may be different or restricted.

Note

1. If a "Ø" mark appears on the screen when a button is pressed, it means the function is not available at the moment on the current disc or at the current station.
2. Depending on the conditions of the recording equipment or the (CD-R/RW, DVD +R/RW, MP3, Picture CD) disc itself, some discs cannot be played on this player due to the configuration and characteristics of the disc, or due to the condition of recording and digital copyright software that was used.

Disc Error Messages

If there is a problem with the format of the loaded disc, then the disc cannot be played correctly.

1. The region code of the disc does not match the player's region code. To solve this problem, you can check Troubleshooting.
2. The parental rating level of the disc is higher than the parental rating level setting of the player. The player will not play the disc.

3. Bad/No disc: The player is equipped with automatic disc quality detection software. If the player detects a disc that is damaged or has a format problem, it may play the disc at a lower quality or stop playing completely, depending on how serious the damage is.

Note: DVD disc production quality may vary and some discs may deviate from the industry standard.

Some incorrectly formatted discs may still play, however, the playback and operational quality of the disc may be substandard.

Playable Discs

This DVD player is available to play Blu-ray DVDs from A region (Please select a play option in the menu and press OK button if you would like to play CPRM disc.)

Supported Disc formats: BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW

Note: If you have trouble with playing a certain disc, remove the disc and try a different one. Improperly formatted discs will not play on this player.

Volume Control

Press VOL+/VOL- button on the player or on the remote control. You will increase the volume to 100.

The volume temporarily switch off by pressing MUTE button on remote control. Playback will continue without sound, press MUTE again or press VOL+/VOL- button to activate sound.

Turn On / Off the Player

Press power switch ON/OFF on right side on DVD player to ON, you will turn it on or off.

Note: If the player will not be in use for a long period of time, please turn it off and unplug the player from the power source.

Playing Discs

1. Slide the Power switch on the player to "ON" position to turn on the player.
2. Open the disc cover and Insert a playable DVD or CD disc, Make sure the label side is facing up, and then close disc cover.
3. The player will scan the disc, and then the playback will start automatically. If a disc menu appears on the screen, see "using the disc menu" for details.
4. If the disc is locked by parental control, you must enter your password (see "SYSTEM SETUP" section for details).
5. During the playback, press the **STOP** button stop playback.
6. Sliding the Power switch on the player to "OFF" position will turn off the player.
7. Press the **ANGLE** button to use the picture angle while playing a DVD disc that has been made with multiple angles.Only the DVDS shot with multi-angle scenes have this function.
8. Press the **MUTE** button on the remote control to turn on or off the sound.
9. Press the **Go To** button on the remote control to select the play time.
10. Press the **PROG** on the remote control button to re-configure the playing order.

Play a Blu-ray Video Disc

Note: BD live resources have stopped updating. You may not be able to obtain online resources by using LAN port connection


Blu-ray video discs have larger capacity and support features such as high-definition video, multichannel surround sound, interactive menus and so on.

1. Insert a BD-video disc.
2. Playback will automatically start, or select a play option in the menu and press **OK**.
3. During playback, you can press **TOP MENU** to display additional information, features or content store on the disc.
4. During playback, you can press **POPUP** to display the disc menu without interrupting disc play.
5. During playback, press the **[OSC]** button on the remote, the **SCREEN MENU** will be displayed. (As shown in the picture bellow).



PIP Second Video 【BD-V】 : Displays the state of the second Video. Use direction key **RIGHT** to open the second video selection box, then press **UP/DOWN** to select the full screen video and the second video window (picture in picture).

(Note: This options may vary from the disc type)

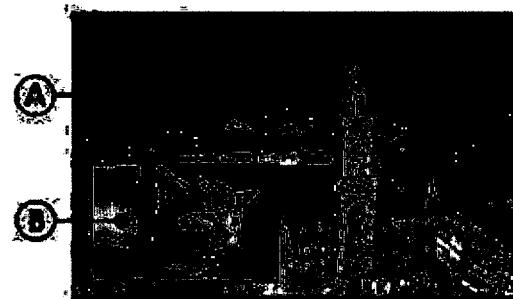

(A) Primary video (B) Secondary video

Second Audio 【BD-V】 : Displays the state of the second Audio. Use the direction key **RIGHT** to open the selection box, then press **UP/DOWN** to switch on/off the audio output.

(Note: This options may vary from the disc type)

Enjoy BD-LIVE

(Attention: This feature is based on the Disc)

You can enjoy the BD-Live functions which enable you to use interactive functions on the disc when the unit is connected to the Internet.

Example of BD-Live Interactive functions:

1. Additional content (such as movie trailers, subtitles and BD-Java, etc.) can be downloaded to a connected USB storage device.
2. Special video data may be played while being downloaded.
3. When a disc supporting BD-Live is played, the product or the disc's ID can be sent to the content provider via the Internet. Service and functions will differ depending on the disc.

Note

- The unit must be connected and set up to access Internet.
- Depending on the connection environment, it may take time to connect to the Internet.
- When BD-Live functions are used and the unit is connected to the Internet, your standard Internet service provider charges will apply.
- Follow the instruction given by the disc when using the BD-Live function.
- It is recommended to use a USB storage device for download the content (at least 1GB free space is recommended).

Before you enjoy the BD-Live function, Please set up your Blu-ray as below step: Pressing the setup button to go into the system setup menu, then selecting **BUDA** and enter to **BUDA** setup to select the USB or Card when playing BD-Live disc.

Play Video

Control Video Play

1. Play a title
2. Use the remote to control the play back

Buttons	Action
▶	Start or resume play / Pause play.
■	Press once to stop playing and return to home page, press the button ▶ to play from where you leave last time Press twice to stop playing and return to home page, press the button ▶ to start playback from the beginning
◀◀ ▶▶	Skip to a previous/next title or chapter.
◀◀ ▶▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.

Note:

For BD disc with Java application, the resume function is not available.

Display Menu

BD-Video Disc:

MENU: Stops the video playing and returns to the disc menu. This feature is disc-dependent.

POPUP: Will access the BD-video disc menu without interrupting disc play.

DVD-Video Disc:

MENU: Will Display the root menu of a disc

POPUP: Will Display the root menu of a disc

Play Music

Controlling music playback

Use the remote control to control the playback for audio file.

Buttons	Action
▶	Start or Resume play / Pause Play
■	Stop Play
◀◀ ▶▶	Skip to a previous or next title or chapter
◀◀ ▶▶	Search fast-backward or fast-forward. Press repeatedly to change the search speed.
① ② ③ ④ ⑤ ⑥ ⑦ ⑧ ⑨ ⑩	Select an item to play
REPEAT	Select or turn off repeat mode

Play A Photo Slideshow

You can play JPEG on the player as a slideshow.

1. Insert a disc or USB device that contains JPEG files
2. Select a Photo folder, then press OK to play.
- To select a Photo, use the Navigation buttons.
- To enlarge the selected Photo and start slideshow, press OK.

Note:

1. It may require more time to display the disc content on your TV If there is a large number of songs/ photos compiled onto one disc.
2. This product can only display digital camera Pictures in the JPEG-EXIF format, typically used by almost all digital cameras. It cannot display Motion JPEG, or Pictures in formats other than JPEG, or sound clips associated with Pictures.
3. Folders/files that exceed the supported limit of this product cannot be displayed or played.

Controlling Photo Slideshow

1. Begin a Photo slideshow.
2. Use the remote control to control the play as follows:

Buttons	Action
◀ ▶	Rotate a photo
▲ ▼	Flip a photo
■	Stop play

Set slideshow interval and animation

1. During slideshow playback, press OSC. The options menu will be displayed.
2. Navigate the options with the Navigation button.
3. Select an option in the menu, then press OK.

Playing music during a Photo slideshow

Create a musical slideshow to play both CD music files and JPEG Photo files simultaneously.

Note:

Create a musical slideshow, you must store the CD and JPEG files on the same disc as the photos.

1. Select your CD music to play and start play-back.
2. Press Media Center to return to the main menu.
3. Navigate to enter a photo folder, then press OK to start slideshow play.
- Slideshow begins and continues till the end of the photo folder.
- Audio continues to play until the end of the disc.
- To stop the slideshow play, Press ■ .
- To stop the music play, press ■ again.

Special Features

You can play or view the supported data files, such as the MP3/WMA, Video in AVI files, photo in JPEG. Like most DVD players in the market, it supports max pixels up to 1920*1080, and max capacity up to 32GB Flash memory.

Image files formats: JPG/PNG/BMP/TIF

Audio files formats: MP3/OGG/WMA/WAV/APE/FLAC

Video files formats: MOV/MPG/VOB/3GP/FLV/AVI/MKV/MP4/TP/TS Video up to 1080P

Tips:

1. Insert a USB or SD/MMC card into slot on the right side of the player

2. Press the MEDIA button to appear the media center page

3. Press the navigation keys to select the file and press OK

4. Enjoy your image/audio/video

All functions are the same as to play a disc (Except for Blu-ray®DVD), and the USB port is compatible with flash memories.



Tips:

The DVD player can only support USB 2.0 Flash Drive up to 32GB. Doesn't Support USB 3.0 Flash Drive higher than 32GB.


1. It is not warranted the compatibility with MP3 players using owner software.

2. Always stop the playback or change to other modes before removing the USB device.

General Settings

Basic Operation for the Menu

1. Press STOP twice during playback
2. Press SETUP, the SETUP MENU display on the screen.
3. Select a main menu by LEFT/RIGHT.
4. Select the menu you want by UP/DOWN buttons and press RIGHT to enter.
5. Select the option by UP/DOWN and press RIGHT. You can press LEFT to return to the previous menu.
6. Select by UP/DOWN buttons and press OK to confirm. You can press LEFT to return to the previous menu.
7. To return to the main menu from any submenu, press RETURN.
8. To exit the menu, press SETUP.

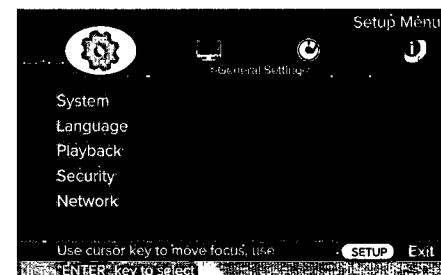

General Player Settings

System

1. Screen Saver: Turns the screen saver on/off. The screen saver will display in 3 mins if there is no operation when the unit is turned on.

2. Disc Auto Playback: Turns the disc auto playback function on/off.

3. Disc Auto Upgrade: Turns the Disc Auto Upgrade function on/off.

4. Load Default: Return the player to its default settings.



5. Upgrade: select this when you want to upgrade your player software to the latest version.

6. Easy setup: Make default settings Fast.

7. BUDA: Define memory for BD-J.

* Notice : BUDA Setup has two-submenu of "USB/SD" & "On board". If you choose "USB/SD", you must connect USB or Card first

8. Copy Right: Statement on Copy Right and GNU GENERAL PUBLIC LICENSE

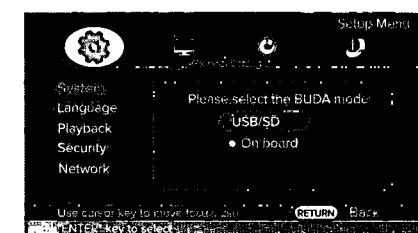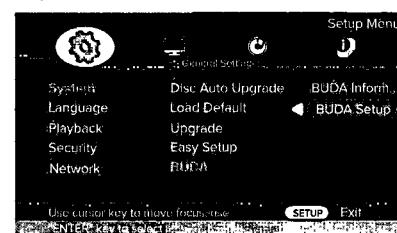


Language

1. OSD: Selects the OSD language.
2. Menu: Selects the menu language of the disc.
3. Audio: Selects the audio language for the program.
4. Subtitle: Selects the subtitle language for the program.

Note:

You have to select the audio and subtitle language according to the requirements on the disc.

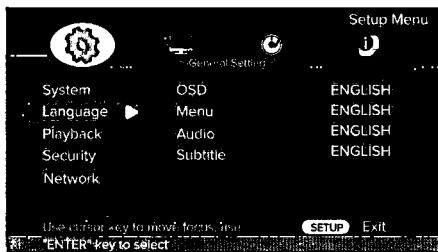


Playback

1. Closed Caption: Turn on/off the CC function.
2. Angle Mark: Turn on/off the Angle mark function.
3. PIP Mark: Turn on/off the PIP mark function.
4. Secondary Audio Mark: Turn on/off Secondary Audio mark function.
5. Last Memory: Turn on/off the last memory function.

Note : To ensure that the "Last Memory" function can be used next time, please remove the disc and turn off the Blu-ray DVD player when it is no longer in use.

6. PBC: Turn the PBC function on/off.
7. Audio Watermark Level3.

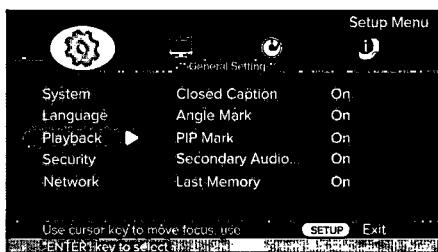

Security

1. Change Password: Changes the password for parental control menu.
2. Parental Control: to set the parental control.
3. Country Code: Select the Country code.

Note:

The original code is 0000. The code can be changed by user




Network

Connect this product to a broadband MODEM or router. This player will start to detect if there is a connection to the network. If the connection test fails, select (Retry) and press OK to try and re-connect to the network again.

1. Internet Connection: Displays the Internet connection state.
2. Information: Displays Information of the current Network.
3. Connection Test: Tests the Internet connection state.
4. IP Setting: Sets the IP for the player.
5. BD-Live Connection: Connection situation of BD-Live.
6. Proxy Setting: Setup Proxy Server.

Note:

This feature is based on the Disc

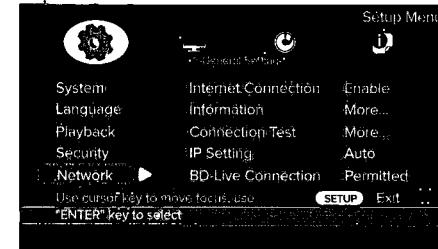

Display Settings

TV

1. TV Screen: Selects the display mode for the TV.
2. Resolution: Selects the resolution for the TV.


NOTE: It is recommended to set it to AUTO mode, it will automatically adapt to the pixels of the display TV

3. TV System: Selects the TV system type.

4. Color Space: Selects the color space.

5. HDMI Deep Color: Selects the color for HDMI.

6. HDMI 1080 24Hz: Enable/disable this settings.

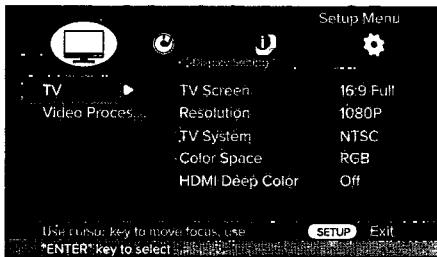


Video Processing

1. Video Adjust: Enter the submenu to adjust the video display.

2. Sharpness: Select the playback sharpness mode.

Adjust the Brightness, Contrast, Hue, Saturation of the screen to suit.

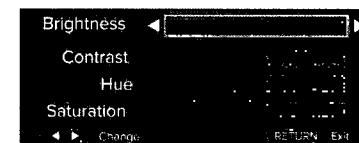


Audio Setting

1. HDMI: Selects the HDMI mode.

Attention: Please make sure there is no disc in the DVD player and must be connected the HDMI cable

2. Down sampling: Selects down sampling (Select this when the Amplifier connected to the player is not 96KHz compatible)

3. Dolby DRC: Set Dolby DRC on / off or auto

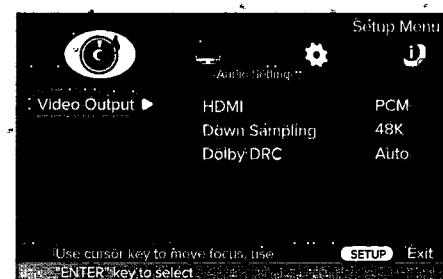

Specifications

Playback disc formats	BD, BD-R, BD-RE, DVD-R/RW, DVD+R/RW, DVD-Video, VCD, CD, CD-R/RW
Video formats	MOV/MPG/VOB/3GP/FLV/AVI/MKV/MP4/TP/TS Video up to 1080P
Audio formats	MP3/OGG/WMA/WAV/APE/FLAC Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS
Photos	JPG/PNG/BMP/TIF
Audio	HDMI output
USB	As additional USB memory for software updates are storing BD-Live bonus contents.
Video	<ul style="list-style-type: none"> Signal system: PAL / NTSC HDMI video output: Auto, 480i/576i, 480p/576p, 720p, 1080i, 1080p, 1080p@24Hz
Main unit	<ul style="list-style-type: none"> Dimensions (w x h x d): 346 x 50 x 247 (mm) Net Weight: 1.5kg Wave length: <ul style="list-style-type: none"> BD: 405 + 5nm/-5nm DVD: 650 + 13nm/-10nm CD: 790+15nm/-15nm

Troubleshooting

WARNING: Before requesting after service please check this possible resolution. Risk of electric shock. Never remove the casing of the product. To keep the warranty valid, never try to repair the product yourself.

Check the following Troubleshooting guide in the following section, If you have

any question or need warranty, please feel free to

email us at: us-dvd-146@eitack.com

No reaction to the remote control	<ul style="list-style-type: none">• Make sure the player is connected to a power outlet.• Insert the batteries correctly.• Point the remote control at the IR sensor located on the front panel of this product. <p>If the remote still does not function, try putting new batteries into the remote control.</p>
No picture/sound	<ul style="list-style-type: none">• Make sure the connection is in good condition; volume is not too low; audio receiver or TV work normally; audio setting is proper.
No picture on HDMI connection	<ul style="list-style-type: none">• If this player is connected to an unauthorized display device with an HDMI cable, the audio/video signal may not be displayed• Check if the HDMI cable is faulty. If faulty or damaged, replace the HDMI cable.• If this happens when you change the [resolution] setting, press Resolution on the remote control repeatedly until the picture appears.
High-definition video signal not playing on the TV	<ul style="list-style-type: none">• Ensure that the audio cables are connected to the audio Input of the TV• Assign the audio Input of the TV to the corresponding video Input. See the TV user-manual for details.
No sound on HDMI connection	You may not hear any sound from the HDMI output if the connected device is non-HDCP compliant or only DVI compatible.
Disc cannot be played	<ul style="list-style-type: none">• Ensure that the disc is loaded properly• Ensure that this player supports the disc. See Specifications.• Ensure that this player supports the region code of the DVD or BD.• For DVD+RW, ensure that the disc is finalized. <p>Clean the disc.</p>
Not entry sign appears on the TV	<ul style="list-style-type: none">• The requested operation is not possible.
BD-Live feature	First, the disc must be marked with BD-LIVE, and ensure that the network is connected normally, insert USB disk or memory card, U disk or memory card to ensure at least 1GB above the space, the bigger the better. Then, make sure that the BUDA in system setting is set to "USB/SD".
Unable to access BD-Live feature	<ul style="list-style-type: none">• Check the network internet connection or ensure that the network Internet connection has been set up• Clear USB storage.• Ensure that the BD disc supports BD Live Feature.

Warranty

The warranty will not be valid If:

1. The product has not been installed, operated or maintained in accordance with the manufacturer's operating instructions with the product.
2. The product has been used for purposes other than its intended function.
3. The product has been used for purposes other than household use.
4. The damage or malfunction of the product is caused by any of following conditions:
 - Incorrect voltage
 - Accidents (including liquid or moisture damage).
 - Misuse or abuse of the product
 - Faulty or improper installation
 - Mains supply problems including power spikes or lightning damage
 - Infestation by insects
 - Tampering or modification of the product by persons other than authorized service personnel
 - Exposure to abnormally corrosive materials
 - Insertion of foreign objects into the unit
 - Used with accessories not pre-approved

Please refer to and heed all warnings and precautions in the User Manual.

we provide 12 MONTHS warranty from the date of purchase,

if you experience any problem about the product,
please don't hesitate to contact us at:

us-dvd-146@eitack.com

We will reply you asap in 24 hours and give you a satisfied solution.

(If there may less happen short delays due to rest holidays, please
help wait patiently and we will reply you asap once we see
your emails.)