 



Portable CD Player

User quick guide for CD204


Starting Steps

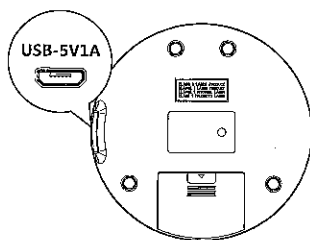

 
① Connect power or insert batteries

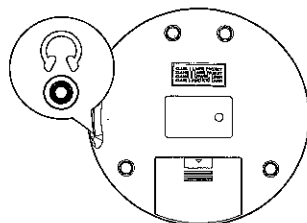


② Plug in headphones

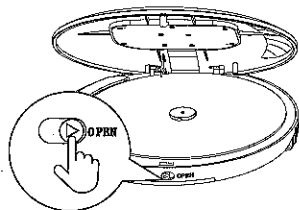

③ Open the upper cover

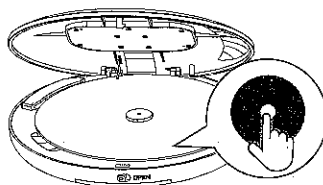

④ Insert disc

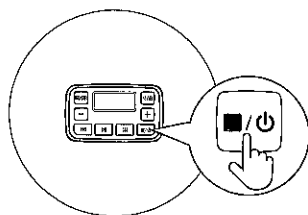


⑤ Start to play

Introduction to button functions



	Stop / Long press to power on/off
	Next song / long press for fast forward
	Play / pause
	Last song / long press for fast reverse
	Volume up
	Volume down
	Short press to select playback modes, long press for locking or unlocking
	EQ sound mode / long press for DIR; MP3 disc music directory selection

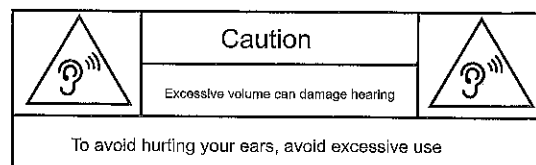

Common problems analysis

1. Cannot power on (unable to start): check whether the power supply is correctly connected to the DC power interface, or whether the battery is correctly assembled according to the label of the battery compartment.
2. Cannot read disc: discs cannot be read with serious scratches, cracks, fingerprints, or dirt. Please replace it with a newer or clean one. (note if the disc is in an acceptable format)
3. No sound: check whether the earphone is correctly inserted into the headphone connector.

Contact us

HONGFUTAI E-TECH(SHENZHEN)CO., LIMITED Web: <http://hott.net.cn>
ADD: 4F, No. 17, Xinxing Industrial Park, Xinxing Community, Fuhai Street, Baoan District, Shenzhen 518103, China.

U.S.A Service Center
Toll-free: 1-866-468-8260(09:00-17:30) E-mail: service@hott.net.cn
HOTT Corp: 13820 Benson Ave. Ste B Chino, CA 91710-5201

Germany Service Center
Toll-free: +49 7171 8707105(8:00-17:00) E-mail: info.eu@hott.net.cn
Address: Rolf-Michael Pohl Klarenbergstraße 36 73525 Schwäbisch Gmünd