


SEMIER

SM-226





Instruction Manual

Portable AM/FM Cassette Player & Recorder

MODEL: SM-226

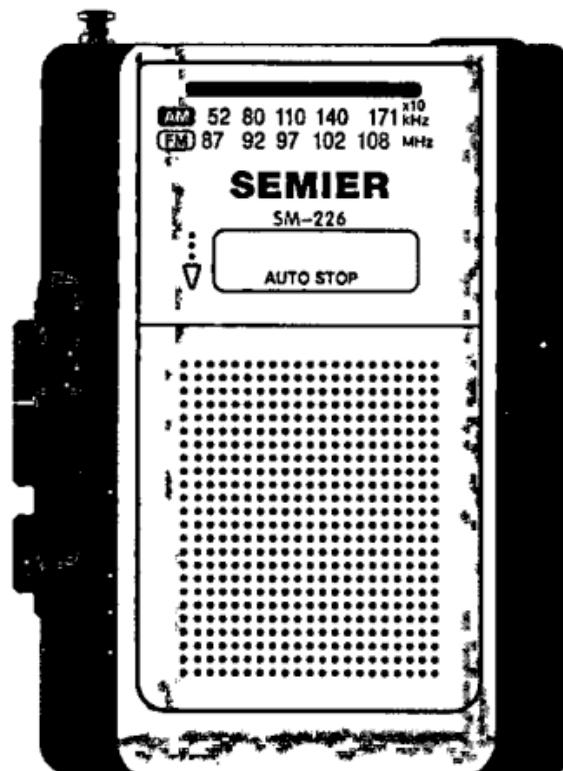

PARTS INTRODUCTION

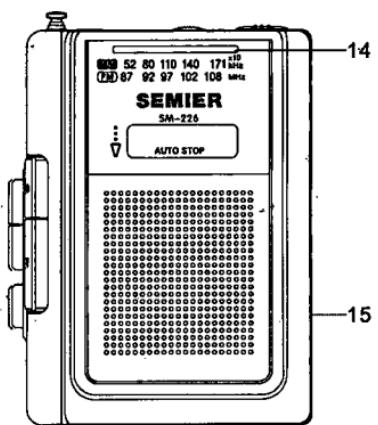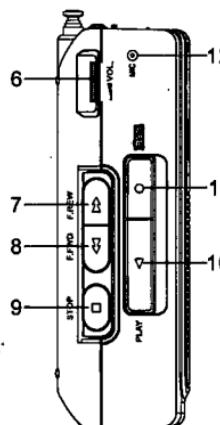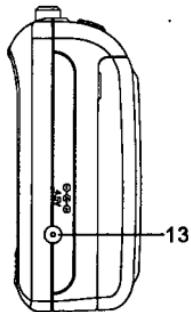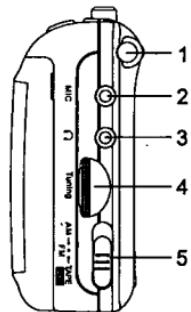


①

②


- 1.FM Antenna
- 2.Microphone Jack
- 3.Earphone Jack
- 4.Tuning Knob
- 5.Function Switch
- 6.Volume Control
- 7.Fast Rewind Button
- 8.Fast Forward'Button
- 9.Stop Button
- 10.Play Button
- 11.Record Button
- 12.Bulit-in Microphone
- 13.DC jack
- 14.AM/FM Dial scale
- 15.Battery Door

POWER SUPPLY

 
- 1.open the battery compartment door (15), push down to open the battery door.



- 2.The appliance uses 2pcs (AA/LR6) batteries, please put the batteries into batteries compartment(15) according to the polarity.

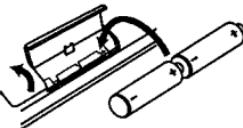

- 3.You can also plug in 4.5V DC adaptor to DC jack (13) when you use the unit.

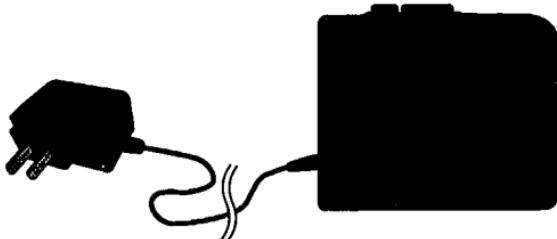

③

ATTENTION

- 1.Do not use the new and old or different type batteries together.
- 2.In order to prevent the leakage of the electrolysis liquid or danger of explosion, do not charge,heat or resolve the batteries.
- 3.If you do not use the appliance for a long time, please take out the batteries, lest the leakage of the battery corrodes the parts in the radio.
- 4.If the sound is distorted or the volume is faint, please change the batteries in time.

ANTENNA OPERATION

- 1.When listen to radio, please pull out the FM antenna(1) to obtain the best effect.
- 2.When listen to AM, it's using the internal magnetic antenna. You can get the optimum reception by rotating the direction of the radio.



④

RADIO RECEPTION


1. Set the function switch(5) to AM or FM. Select the desired radio band with the band switch.
2. Set the tuning knob(4) to a radio station.
3. Adjust the volume control(6) to the desired level.
4. To switch off the radio, set the function switch to tape.

CASSETTE OPERATION

Open cassette door and close it after insert a tape inside.

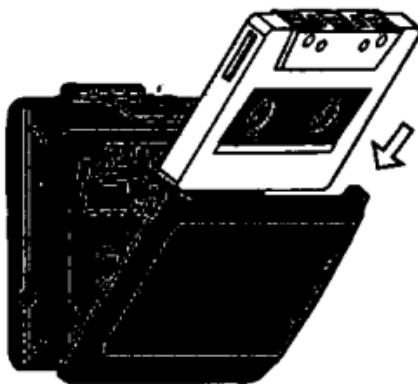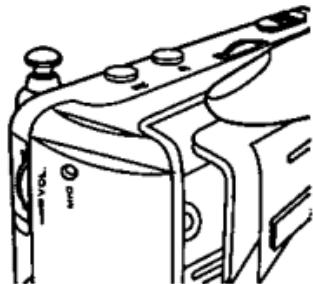


Set function switch(5) to tape.

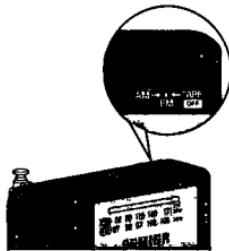

A.Cassette playback

1. Press play button(10) for tape playback.
2. Increase or decrease the volume by volume control(6).
3. Press fast forward (8) or fast rewind button(7) to the segment of tape you need.
4. Press stop button(9) at any time to stop playback, when the end of the tape has been reached, tape playback stops automatically.

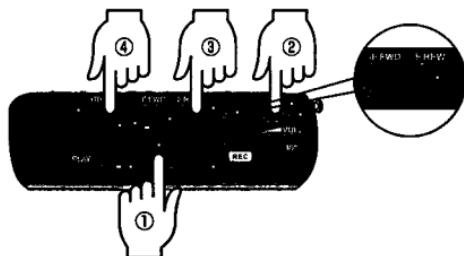


⑥


B.Cassette recording

- I .Recording from built-in microphone.

Press record (11) and play button(10) together, the tape will record voice or sound by built-in microphone.

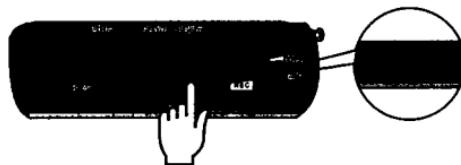

- II .Recording from external microphone plug in external microphone to microphone jack(2), Press record (11) and play button(10) together, the tape will record voice or sound via external microphone.

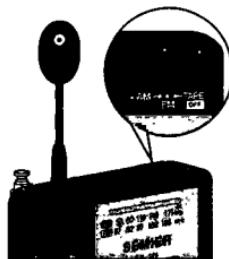

⑦


III. Recording from radio

1. Set the function switch(5) to AM or FM and turn to your desired station by tuning knob(4), follow the instructions in the radio reception section.
2. Press record (11) and play button(10) together, the tape will record the sound from radio.

Remarks:

1. Press stop button(9) to stop the recording operation.
2. The volume control(6) does not affect the recording level due to ALC circuit inside unit. When recording from built-in or external microphone, to obtain the best result and reduce saturation risks, speak at a distance of approximately 5 to 8cm from microphone. When recording from AM radio, you may receive interference.

3. Protection against accidental erasure. When you record on a cassette, the previous recordings are erased automatically. To protect them against any risk of accidental erasure, cassettes are provided with protective tabs. For this purpose, remove the protective tab (or both) located at the top of the cassette using a knife or a screwdriver. If you subsequently need to re-record on a cassette protected in this way, you can cancel this protection by covering the hole revealed with a piece of adhesive tape. It is not possible to press the RECORD button if the protective tab has been removed and has not been replaced by adhesive tape.

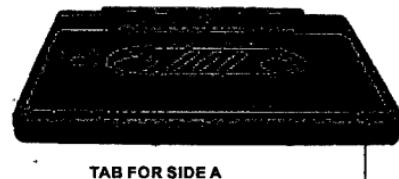

EARPHONE

When listen to the radio or tape, in case of disturb other people, you can use earphone.



MAINTENANCE

To obtain the best performance from your player, clean the recording-playback heads and pinch rollers regularly. If these parts become dirty, the sound quality of your recordings may be altered and the tape speed may be modified.

1. Open the cassette door.
2. Press the PLAY button(10).
3. Using a cotton bud soaked in a special cleaning fluid or spirit, clean the playback and recording heads carefully until all traces of dust or magnetic oxide have disappeared. Clean the surface of the pinch rollers and capstans in the same way.
4. Dry by wiping the recording and playback heads carefully using a soft cloth.

TECHNICAL INDEX

1. Voltage : DC 3V (1.5V, AA/LR6x2pcs)
2. Frequency range : AM: 520-1710kHz
FM: 87-108MHz
3. Max output power: 0.5W
4. Earphone output power: 3MW
5. Unit size: 127(L)x36(W)x91(H)mm
6. Unit weight: 203g (without battery)

PACKAGE INCLUDES

1. 1 x AM FM radio cassette player
2. 1 x English manual