



Go Pro Instructions

SET UP

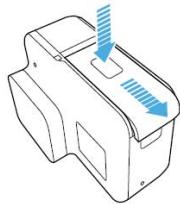


Open the battery door.


NOTICE
The camera is not waterproof when the doors are open.

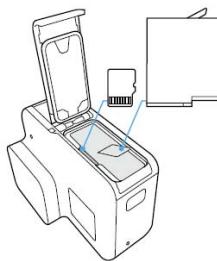

Insert a microSD™ card (sold separately) + battery.

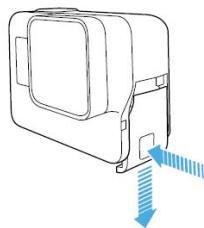


Open the side door.

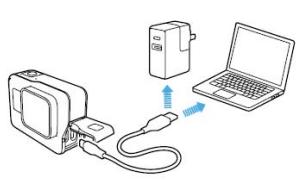

Charge the battery.


POWER ON

Power on the camera.

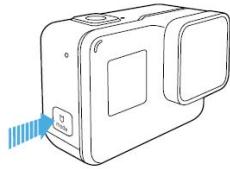


CAPTURE VIDEO + PHOTOS



Select the desired camera mode with the touch display or Mode button.

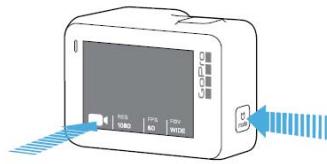

Press the Shutter button to start and stop recording.

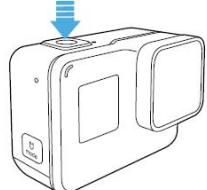

VOICE CONTROL

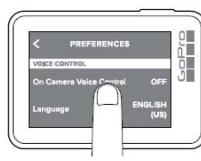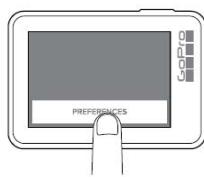

1. Swipe down, then tap Preferences > On Camera Voice Control.
2. Select a language. For English and Spanish, be sure to choose your dialect.
3. Tap On.
4. Say a command:
 - GoPro start recording
 - GoPro stop recording
 - GoPro take a photo

To see all of the commands, go to Preferences > List of Commands.

TIP
If you are recording video or time lapse, stop recording before issuing a new command.

APPS

Capture and create stunning videos. Our mobile and desktop apps make it easy.



CAPTURE

Live preview, playback + full camera control.



QUIK™

Awesome edits made easy.



QUIK | DESKTOP

Import and enjoy your footage, and create awesome videos with just a few clicks.

▶ Download at gopro.com/apps