
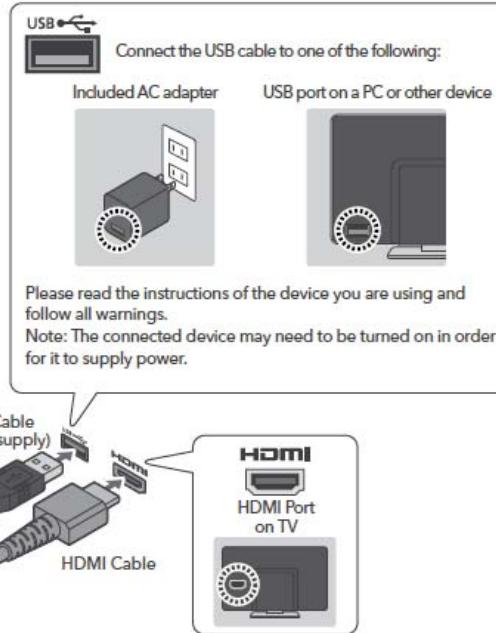


NINTENDO ENTERTAINMENT SYSTEM™
NES CLASSIC EDITION

Start Up Instructions

1 Setup

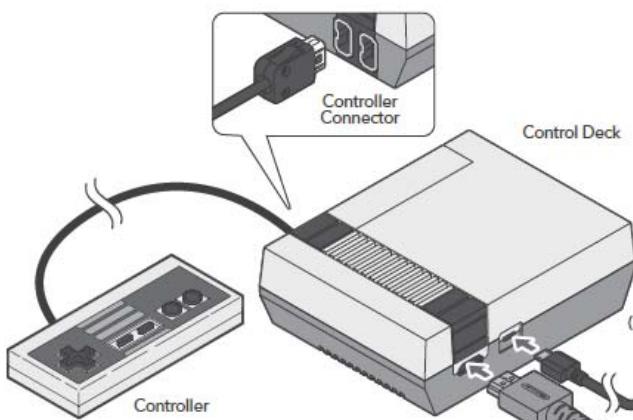

2 Turn on the system

The HOME menu appears. Follow the on-screen instructions.

Note: If the system is on but no buttons are pressed for one hour, it will automatically turn off. If a game is running, save data will be created. To use the system after it powers off automatically, press the power switch OFF and then ON again.

How to Quit

In order to prevent data corruption or malfunction, always turn off the system, then turn off the device being used as a power supply or unplug the USB cable. **Disconnect the cable and unplug AC adapter when not in use.**

