




Roku Ultra Instructions

Roku Ultra must be factory reset before returning

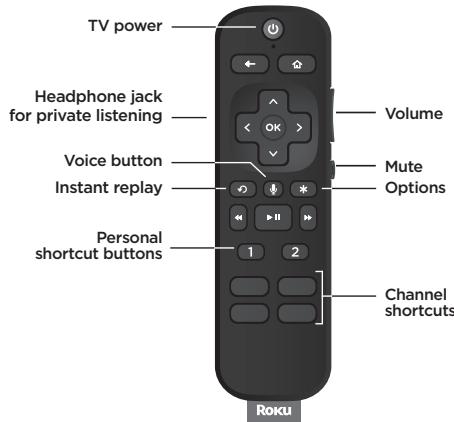


1 2

Personal shortcuts

To set: Give a command using the voice button. Then, press and hold a personal shortcut button until you hear a tone.


To use: Press the personal shortcut button once.

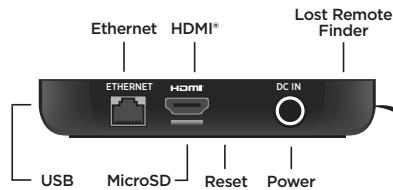

STEP 1: Connect to TV


Connect your streaming player to an HDMI port on the back of your TV using a High Speed HDMI® Cable (not included).

1 HD TVs

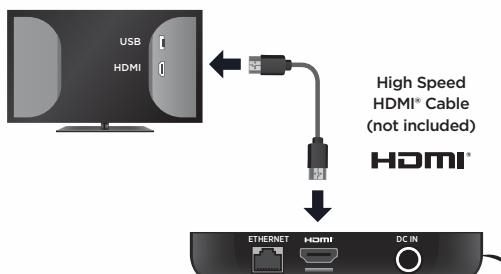


OR

4K/HDR TVs

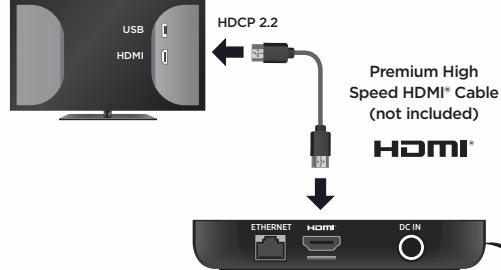


To stream 4K or HDR, choose an HDMI port that supports **HDCP 2.2**. Use a Premium High Speed HDMI® Cable (not included).

For help determining which port supports HDCP 2.2, visit go.roku.com/hdcpc

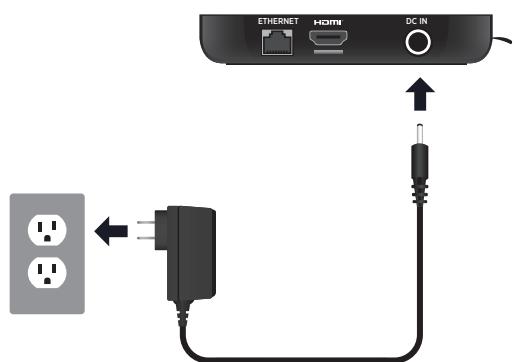2

STEP 2: Connect to power

Use the included power adaptor to connect your streaming player to a wall outlet.


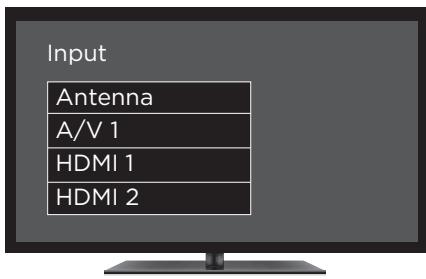
3

STEP 3: Power on TV and select input

Use your TV remote to power on your TV and select the input you used to connect your streaming player.

For help on how to select the correct input, visit
go.roku.com/selectinput

4

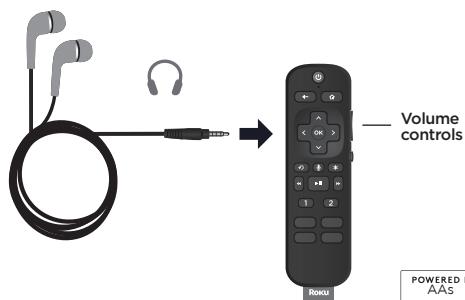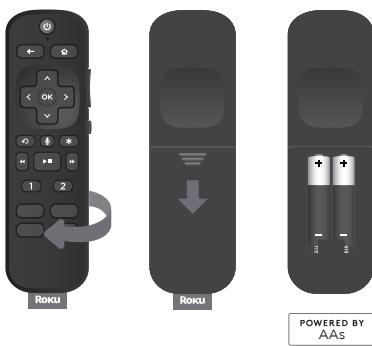


STEP 4: Insert batteries

On the back side of the remote, slide open the battery cover. Insert two (2) AA batteries placing the negative (-) ends in first.

Your remote should pair with your streaming player automatically. For help pairing your remote, visit go.roku.com/remotehelp

NOTE: To use private listening, simply plug headphones into your Roku® remote. Your TV will mute automatically.

5

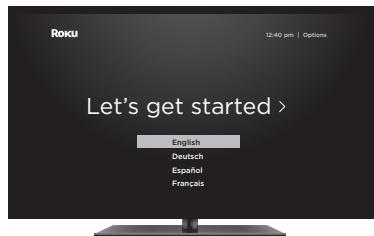

STEP 5: On-screen setup and activation

Follow the instructions
on your TV screen.



Activate your streaming
player by using your
computer or smartphone to
link to a Roku account.

Factory Reset

1. Press the Home button on your Roku remote.
2. Scroll up or down and select Settings.
3. Select System.
4. Select Advanced system settings.
5. Select Factory reset.
6. Follow the on-screen instructions.