





MAA-CLV-S-SNSG-USZ-C1

SUPER NINTENDO[®] CLASSIC ENTERTAINMENT SYSTEM EDITION

Start Up Instructions

Setup


Make connections in the order shown.

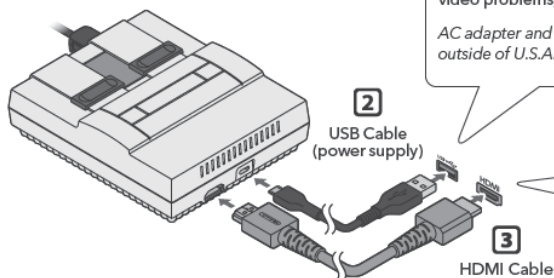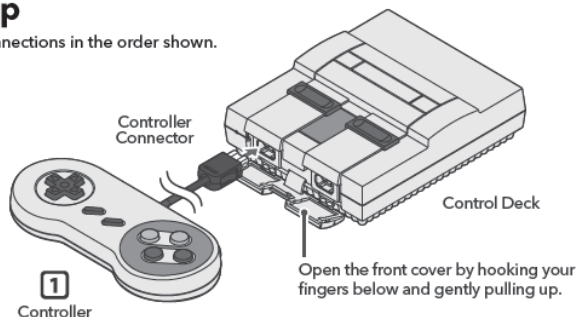

Connect the USB cable to one of the following:

Included AC adapter

USB port on a PC or other device

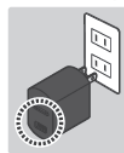

Please read the instructions of the device you are using and follow all warnings.

NOTE: The connected device may need to be turned on in order for it to supply power. If you experience audio and/or video problems, try using the included AC adapter.

AC adapter and power outlet configurations may vary outside of U.S.A.



HDMI[™] Port on TV



Turn on the system

The HOME menu appears. Follow the on-screen instructions.

How to Quit

In order to prevent data corruption or malfunction, always turn off the system, then turn off the device being used as a power supply or unplug the USB cable. **Disconnect the cable and unplug AC adapter when not in use.**

POWER

RESET

If you press RESET

while playing the game, the game is saved and the system returns to the HOME Menu.

