

# USER MANUAL



Lens Clip



Phone Clip



Metal Tripod



25X Telephoto Lens



25X Macro  
Lens



4K HD 0.65X  
WIDE ANGLE  
LENS



210° FISHEYE  
LENS



Kaleidoscope  
Lens

Notes: The wide angle lens and macro lens are screwed together, need to screw it off yourself for separate usage.

Please keep the user manual for further usage and contacting.

## Installation Steps

Firstly, please screw off the screws on the top of the lens clip and aim at the main camera of your phone and tighten the screw to fix it onto your phone.



1. Take the clip and telephoto lens out.



2. Place the lens clip onto the camera of your phone and move the ferrule ring fix it on the center.



3. Rotating the screw clockwise to fix the lens clip.



4. Rotating the telephoto lens clockwise to complete the installation.




## Lens Clip Introduction

The ferrule ring can be slid up and down to suit the lens position of different phones


Switch The Lens in Different Scenes.




Telephoto lens – Watch football/basketball games  
HD telephoto, amazing experience

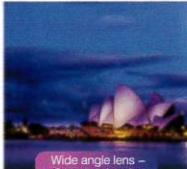

Wide angle lens – Scenery shooting  
Expand the perspective, get more tension

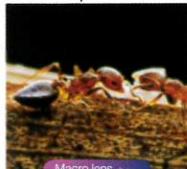

Macro lens – Detail shootings  
Focus on details and explore the mysteries

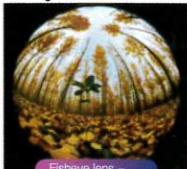

Fisheye lens – Creative shootings  
Wonderful perspective, more interesting.



Kaleidoscope Lens – Entertainment first  
Discover the wonderful world

## How To Use The Telephoto Lens

1. Fix the phone clip into the metal tripod and put your phone into the phone clip, then adjust the position you desired.




2. Rotating the telephoto lens clockwise to fix it into the lens clip and rotate the focus ring to reach the sharpness you desired.

## How To Use The Macro Lens

The macro lens and wide angle lens are screwed together, it is just a wide angle lens if you use it directly. We have to disassemble the wide angle lens separately to use the macro lens.



Wide-angle lens + macro lens  
Combined together

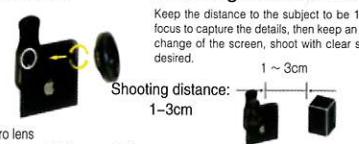

Wide-angle lens part  
Can't be used if disassembled

Shooting Instructions

Keep the distance to the subject to be 1-3cm and focus to capture the details, then keep an eye on the change of the screen, shoot with clear screen you desired.



Macro lens  
(Can be used if disassembled)

Shooting distance:  
1 ~ 3cm

## How To Use The Fisheye Lens

### Shooting Instructions

Rotating the fisheye lens clockwise to fix it into the lens clip, take pictures you desired after that.



## How To Use The Kaleidoscope Lens



### Shooting Instructions

Rotating the kaleidoscope lens clockwise to fix it into the lens clip, take pictures you desired after that.

款式	Telephoto Lens	Macro Lens	Wide Angle Lens	Fisheye Lens	Kaleidoscope Lens
倍率	25X	25X	4K HD 0.65X	210°	Kaleidoscope lens
Weight	100g	5g	15g	20g	11g
Material	Optical lens + aluminum alloy				

## Trouble Shootings

Q: Why did I receive one less lens than described?

A: The wide angle and macro you received are screwed together, it is just a wide angle lens if you use it directly. If you want to shoot the macro effect, the wide angle part must be disassembled.

Q: Is the lens clip going to damage mobile phone?

A: The built-in EVA or silicone pad ensures your phone not to be scratched.

Q: Why do you think about the shooting clarity?

A: As these lens are used for special effects, the edges of photos will be a bit blurred thus we can't promise the original phone definition.

Q: Why does the mobile flash stop working after installed these lenses?

A: The diameter of these lenses is larger than the diameter of the mobile phone camera, after installing these lenses, the position of the mobile flash will be blocked, thus the flash will not work properly.

## Contact US

✉ lierontservice@hotmail.com

We are available for you 24/7 hours, but due to busy work, your email may take up to 24 hours to be replied.

## Product Warranty

30-day money-back guarantee for any reason

For 30-days after the date of purchase, return your undamaged LIERONT product and receive a full refund for ANY reason.

## 12-Month Warranty for Quality-related issues.

For 12-month after the date of purchase, we take care of all quality-related issues with a free REPLACEMENT service.

Reminder: Be sure to use your LIERONT product as directed.